

ARTUSI

Concealed Undermount Rangehood Manual

WUM60MB/WUM90MB



CONTENTS

General	4
Warnings	4
Installation	4
Preliminary Indications	4
Fixing The Hood To The Cabinet	5
Electrical Connection	5
Use	5
Operation	6
Adjustable And Delayed Self-Switching Off	6
Maintenance Reminder	6
Maintenance And Cleaning	6
Metal Grease Filter	7
Long-Life Anti-Odor Filter (For Filtering Hoods)	7
Hood Cleaning	7
Lighting	7
Discontinuation	7
Diagrams	8
Warranty	10

I GENERAL

Exhausting cooker hood. The equipment is constructed under European Standards and with the requirements included in the following Directives: 2006/95EC (Low Voltage Directive), 2004/108 (Electromagnetic Compatibility).

The present instruction manual is an integral part of the appliance itself, therefore it must be carefully kept and ALWAYS accompany it, even in case of its assignment to another owner or user or in case the cooker hood is moved to another installation plant.

The Manufacturer strives for continuous improvements. For this reason, the text and illustrations in this guide may change without notice.

II WARNINGS

Make sure that the voltage (V) and frequency (Hz) indicated on the data plate inside the unit match those available at the installation site. Any eventual adjustment to the electrical system, which may be necessary to install the cooker hood, must be carried out only by competent people.

Any repair carried out by no competent people may cause damages.

For any repair or needed technical support refer to a Technical Assistance Centre, authorized to carry out the replacement of the spare parts. Always make sure that all the electrical parts (lights, exhaustion unit) are disconnected when the appliance is not in use. By storms take off the main switch of the house electrical system.

The use of the cooker hood must not be other than the use of exhausting units for cooking damp on domestic kitchens. The manufacturer does not accept any liability for damages caused by people, animals, or things, by installation and maintenance mistakes, or by any illegitimate use.

We remind that the use of products functioning with electrical energy implies the observance of some essential security rules, as follows:

- This equipment is not intended for people (children included) with reduced mental or motor capacities, with lack of experience or knowledge, unless they are supervised or unless a person responsible for their security, gives them instructions regarding the use of the equipment. Children must be supervised to be sure that they do not play with the equipment.
- Any cleaning action is forbidden if the appliance hasn't been disconnected from the main power supply and if the main switch of the house electrical system is not off. If cleaning is not carried out according to these instructions, a fire may break out.
- Do not pull, take off, or twist the cable coming out from the appliance, even though this has been disconnected from the main power supply.
- Do not sprinkle or throw any water directly on the appliance.
- Do not stick any sharp tool inside the exhausting holes and into the air discharge.
- Do not take out the filters to reach the internal sides of the appliance in case the main switch of the house electrical system is not off.
- Do not singe or flambé directly underneath the cooker hood. Take particular care when frying to ensure that the oil does not catch fire.
- It is forbidden to use the hood as a support surface unless it is expressly indicated.
- Only use the fixing screws supplied with the product for installation.



CAUTION: Accessible parts may become hot when used with cooking appliances.

III INSTALLATION

III.1 Preliminary Indications

Carefully read the guide before installation and use of the appliances.

The installation requires safety equipment and a range of tools as per Fig. 3.1.1

With the hood correctly installed, the minimum distance between the wall unit and the support surface of the cooking pans on a gas hob must be at least 50 cm. (Fig. 3.1.2).

If the installation instructions for the gas hob indicate a greater distance, this must be taken into account.

With the hood correctly installed, the minimum distance between the wall unit and the induction hob must be at least 50 cm.

The formation of condensate occurs especially when the hood is installed over an induction hob. This is normal and is not due to a product fault.

It must not be superimposed on stoves with an upper radiating plate.

Respect all the air discharge regulations. The air must not be discharged in a pipe used to discharge exhaust fumes produced by gas-fed equipment or fuel-fed equipment.

The room must be adequately ventilated when the hoods is used together with other gas or fuel types of equipment.

The hood is equipped with all the necessary fastenings for its installation, which are suitable for most surfaces. Verify that the installation surface is strong. Installation must be carried out by qualified installers according to present regulations.

III.2 Fixing the hood to the cabinet

To install the hood in the wall unit, the measurements in Fig. 3.2.1 must be observed.

Follow the steps indicated below:

Remove the metal filters (Fig. 6.2.1) to access the inside of the hood (Fig. 3.2.2).

Insert the hood in the wall unit, taking care to slot the back panel of the wall unit into the relevant seat (Fig. 3.2.2-A). Secure the hood to the side of the wall unit with the screws provided, two screws per side, in line with the holes on the sides (Fig. 3.2.2-B).

Two spacers are provided (Fig. 3.2.2-C and Fig. 3.2.2-D) to compensate for the different depths in the wall unit as indicated by the positions in the drawing (Fig. 3.2.2).

III.3 Electrical Connection

The electrical connection must be carried out **ONLY** by qualified technicians.

The electrical protection of the electrical connection upstream of the equipment must comply with the regulations in force.

	Caution! Make sure that the voltage (V) and frequency (Hz) indicated on the serial number plate located on the appliances correspond to those available at the installation site.
---	--

Any change to the electrical installation necessary to install the hood should only be undertaken by qualified staff. After installation, insulated parts and those carrying electricity must be protected from any possible contact.

	Caution! If the electrical connection is carried out incorrectly or not meeting the regulations, it may damage part of the appliance and the warranty will not be valid.
	Warning! Before making the electrical connection, turn the main switch of the domestic system to "off".

These appliances must be earthed.

 
 
Two types of connections to the network are possible:

1. Using a standard plug connected (Fig. 3.3.1) to the power cord and inserted into an accessible socket outlet (to be disconnected during service operations). Make sure that the plug is accessible even after the complete installation of the appliance.

2. Stable connection to the network by interposing a bipolar switch to ensure disconnection from the network, with a contact opening distance allowing complete disconnection under the conditions of the overvoltage category III, by the installation rules (Fig. 3.3.2.).

Earth connection (yellow-green wire) should not be interrupted.

If the power cord is damaged, it must be replaced by the manufacturer or its authorized service center or by a qualified technician, to prevent any risk.

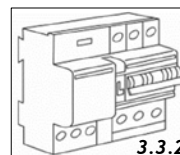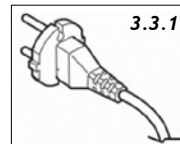

IV USE

This cooker hood can be installed in ducted or filtering mode.

Ducted (external evacuation, Fig. 4.1). Remove any anti-odor filters if present. Kitchen smokes are vented outside through a flue (not provided with the hood) joined to the exhaust pipe flue connector.

This pipe must not under any circumstances be connected to cooker, boiler or burner exhaust pipes, etc.

Install this flue after completing what is described in the INSTALLATION.

The use of pipes and holes on the wall with a smaller diameter than the motor output will cause a decrease in suction performance and an increase in the noise level.

Use as short as possible tubes and with few curves.

Use pipes with smooth internal surfaces.

Filtering (inside recycling, Fig. 4.2). The cooking fumes pass through the Long-Life anti-odor filter (not supplied with the hood, Fig. 6.2.1) to be purified and recycled into the kitchen. The use of anti-odor filters reduces the performance of the hood.

V OPERATION

The hood is supplied with a multispeed motor.

The hood should be run at low speed under normal conditions and at higher speeds only when there is a heavy build-up of fumes or odors.

Ideally, the hood should be switched on as soon as cooking is started and then kept on until all odors have been eliminated.

Control operation (Fig. 5.1):

T1: switch-on at first speed and extractor off.

T2-T3: operation at 2nd and 3rd speed respectively.

T4: intensive speed setting (maximum extraction), the extractor operates at this speed for 5 minutes (with button flashing) and then, it will automatically switch to 3rd speed.

TL: light on/off and light temperature adjustment.

Light adjustment:

TL single click: on/off at the stored brightness and temperature.

TL double click when off: minimum brightness (10% brightness, ambient light).

TL long press (for more than 1 second) when on: brightness adjustment:

- Start from stored setting, DOWN ---> UP adjustment, if not released, the maximum brightness is set
- With another long press, the UP ---> DOWN adjustment goes to minimum brightness
- When the button is released, both at maximum/minimum and during adjustment, the desired intensity is stored for the next switch-on

TL+T4 when on: colour temperature adjustment (same steps as brightness adjustment)

V.1 Adjustable and delayed self-switching off

With the hood operating, choose the desired speed, then press and hold the T2+T3 button for a few seconds until all the LEDs start to flash (T1, T2, T3, T4). By pressing one of the buttons (T1, T2, T3, T4), you can program the self-switch-off time, as follows: T1 for 5 minutes; T2 for 10 minutes; T3 for 15 minutes; T4 for 20 minutes.

It is possible to change the set speed, including the intensive speed, during operation with self-switch-off. If the switch-off time chosen is the same as the set speed, the speed LED flashes; if a different time is chosen, the speed LED remains fixed. The hood must be switched off to disable the self-switch-off.

V.2 Maintenance reminder

Metal anti-grease filters

Once the hood is switched off, after 30-hour functioning, all the LEDs of the speed buttons switch on with a fixed light for 30 seconds to remind that the anti-grease metal filter needs cleaning. To set the timer to zero keep the button T4 (Fig. 5.1) pressed with the aspirator switched off, otherwise the timer will remain set on 30-hour functioning and the reminder will appear when the hood is switched off again.

Long-Life anti-odor filter (for ductless hoods)

Every 120 hours of hood operation, when the hood is switched off, all the LEDs of the speed buttons turn on with a flashing light for 30 sec. as a reminder of the regeneration of the Long-Life filter and the cleaning of the metal anti-grease filters. To reset the timer, simply hold down the T4 key (Fig. 5.1) with the blower off, otherwise the device will give the alarm again the next time the hood is switched off.

24h Comfort function

Press and hold the T1 button for at least 3 sec. The extractor will start operating for 5 minutes every 25 minutes, at the first speed, for a maximum of 24h. During extraction, the button flashes every 1 sec.; it will flash every 5 sec. in the interval (25 min.). The function can be disabled at any time by pressing the T1 button.

VI MAINTENANCE AND CLEANING



Warning! Before any maintenance or cleaning operation, disconnect the hood from the power supply by setting the main switch of the domestic system to "off".

VI.1 Metal grease filter

Particular attention should be paid to the metal grease filter, which has the function of retaining the fat particles contained in the vapors. The grease filter must be washed when the warning appears or at least once a month, use hot water and detergent (or put it in the dishwasher). The filter may become discolored after a few washes. This is normal and does not mean that it needs to be replaced.

To carry out maintenance on the grease filter, it is essential to remove it from the hood. With the hood turned off, the condensation collection tray must be opened and the filter removed by its handle (Fig. 6.1.1). At this point, you can proceed with the filter cleaning. It is recommended to reinsert the grease filter only when it is perfectly dry.



ATTENTION: the grease collected in the filters can easily catch fire and it is therefore extremely important to clean the metallic filters regularly as per instructions

VI.2 Long-Life anti-odor filter (for filtering hoods)

The Long-Life anti-odor filter, where present, captures all the odors present in the cooking fumes, guaranteeing pure air in your kitchen. It does not have to be replaced frequently like an ordinary activated charcoal filter, it can be regenerated every 3-4 months, or according to the frequency of use of the hood, by a normal washing cycle in the dishwasher at about 70°C without any type of detergent, followed by drying in the oven for 30 minutes at 70°C. To keep its efficiency high, it is recommended to replace the Long-Life filter after 6/8 regeneration cycles.

To replace the Long-Life anti-odor filter simply remove the metal grease filter (Fig. 6.1.1) and slide the frame enclosing the anti-odor filter towards the rear (Fig. 6.2.1). Take the frame including the Long Life anti-odour filter and regenerate it (Fig. 6.2.1-A). The filter must be requested to the manufacturer. To install a new Long-Life anti-odor filter, remove the metal grease filter (fig. 6.1.1), place the new Long-Life anti-odor filter on top and slide it to hook it to the metal filter. Reinstall the metal grease filter.

VI.3 Hood Cleaning

The hood must be cleaned immediately after installation and removal of the protective film to eliminate any residual adhesive or other impurities. The hood must be cleaned frequently both internally and externally (at least once a month). Do not allow dirt to accumulate on the surfaces of the hood.

Do not use acid or basic products or abrasive sponges to clean the external parts of the hood. Clean the hood with a sponge moistened with hot water and a small quantity of neutral soap (for example dish soap) to eliminate any grease particles that may have deposited.

Rinse with a damp cloth, carefully remove all the soap, following the direction of the satin finish of the steel surface. Drying is particularly important, especially in areas where the water is very hard and leaves limescale deposits.

VI.4 Lighting

The hood is equipped with LED lighting which, in addition to offering excellent lighting and limited energy consumption, guarantee a considerable duration over time. Both the brightness and temperature of the hood's LED lighting be adjusted (see the OPERATION section).

VII DISCONTINUATION

The discontinuation means the definitive shutdown and disassembly of the appliance.

After discontinuation, the appliance can be installed on another piece of furniture, privately resold, or disposed of.



Caution! For discontinuation, it is necessary to switch the appliance off and disconnect the power

Disassembly requires that the device is accessible and has been disconnected from the power supply.

 
 
 
 
To do this, follow the installation instructions in reverse order.

 
 
 
 
 


This appliance is marked under the European Directive 2012/19/EC, Waste Electrical and Electronic Equipment (WEEE).

The symbol on the product or the packaging indicates that the product should not be considered as normal household waste, but must be taken to the appropriate collection point for the recycling of electrical and electronic equipment.

The appropriate disposal of this product helps to avoid potential negative consequences for the environment and health. For more detailed information, contact your local office, local waste disposal service, or the shop where you purchased the product.

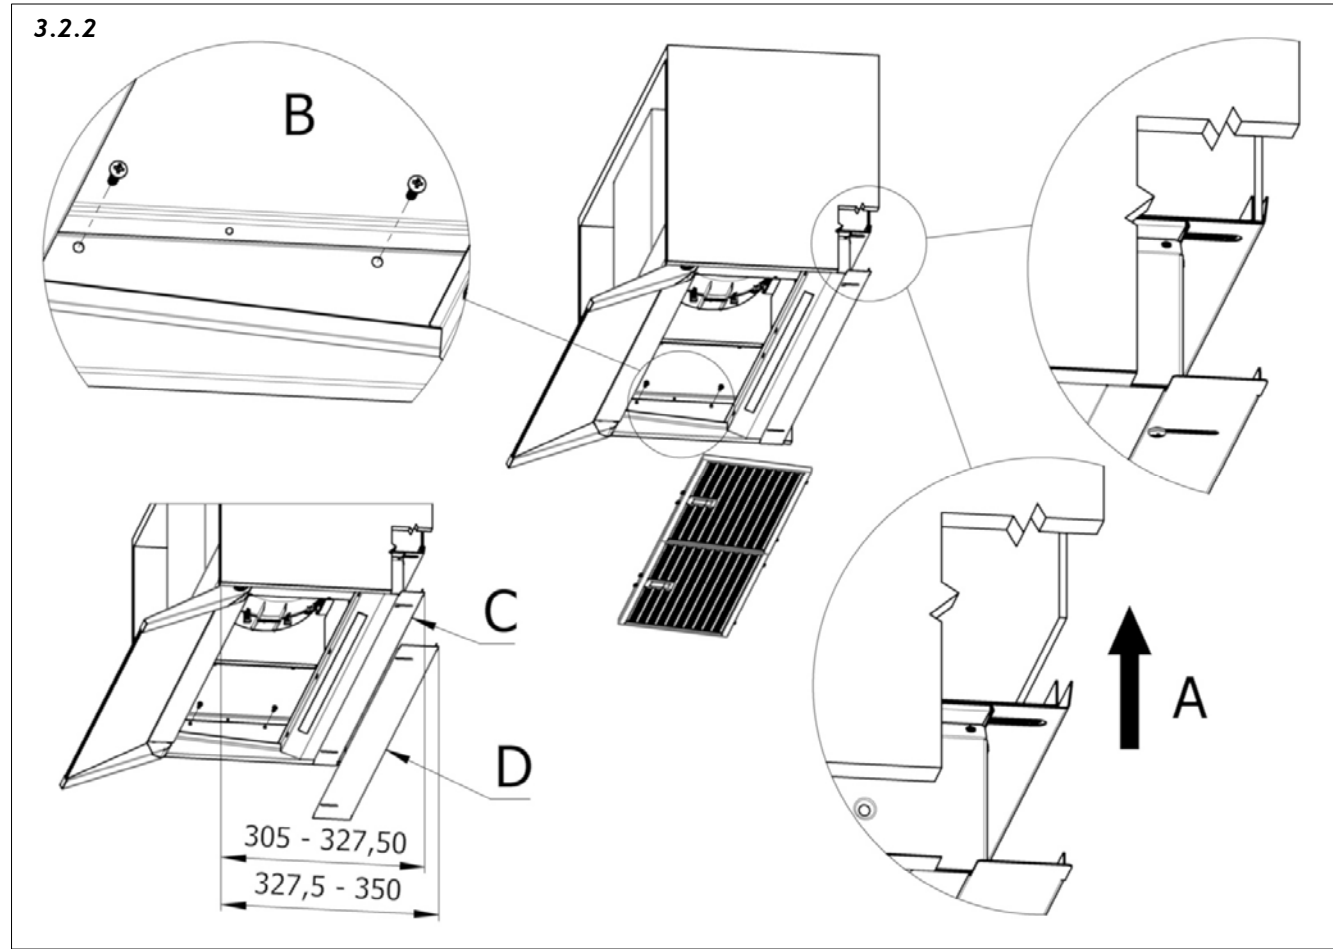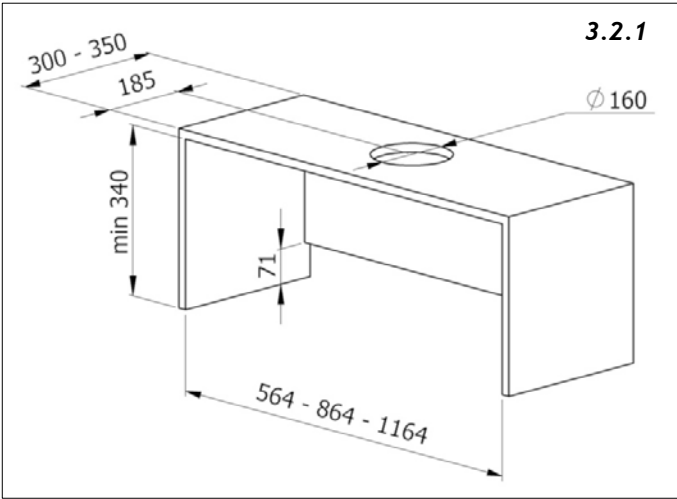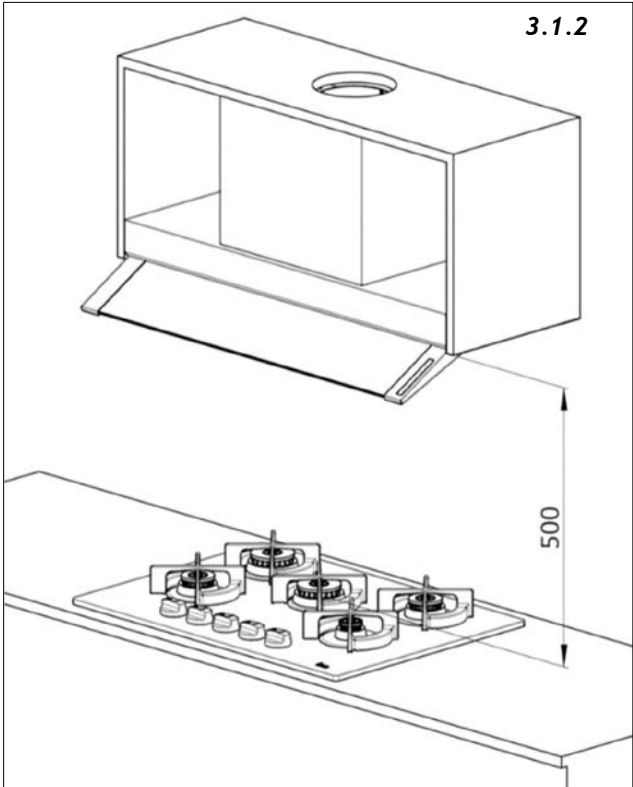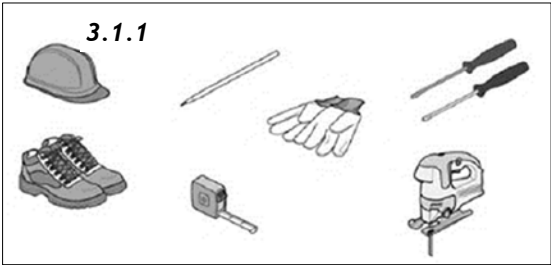

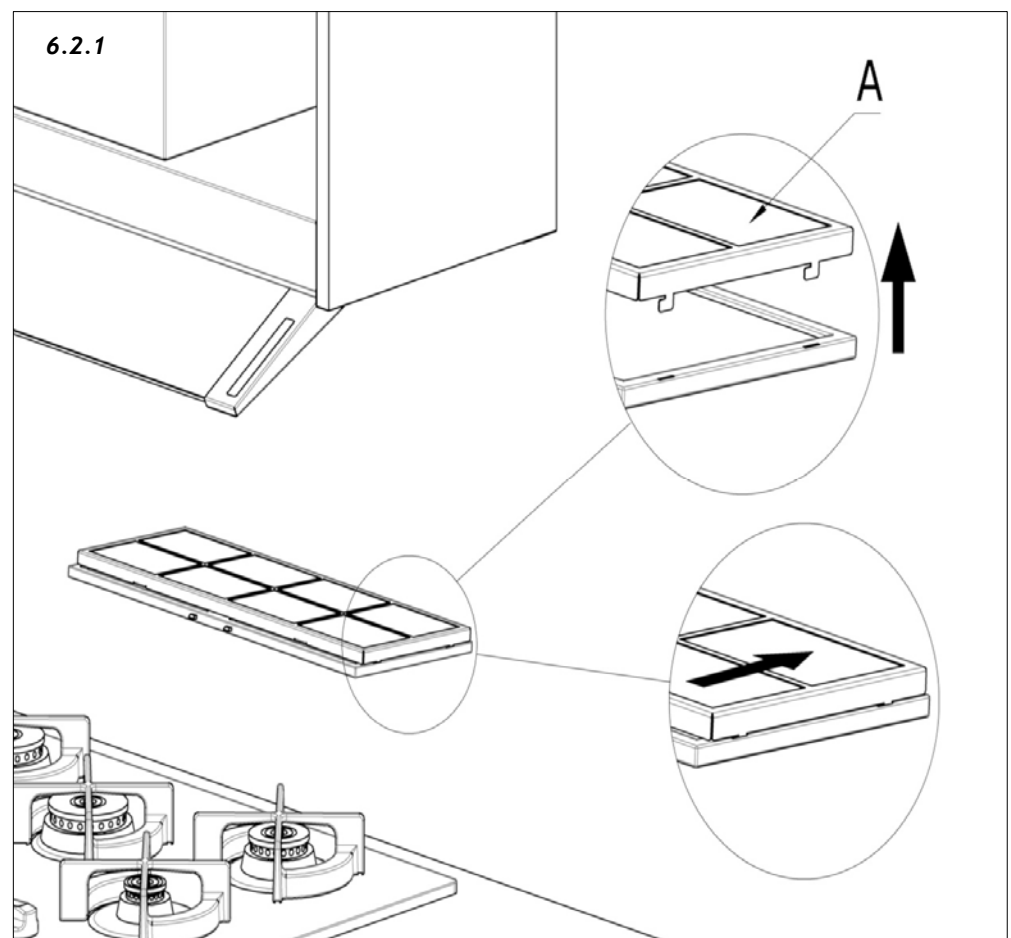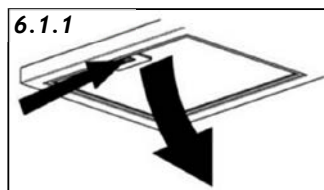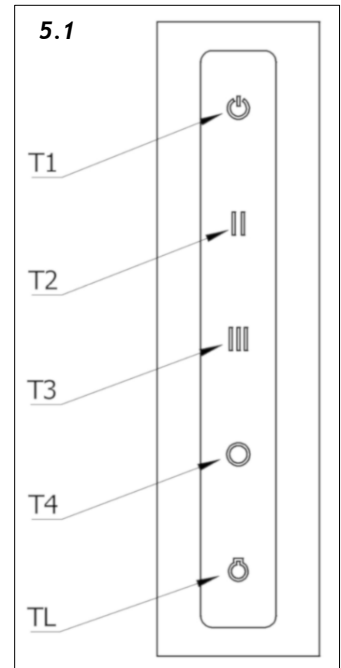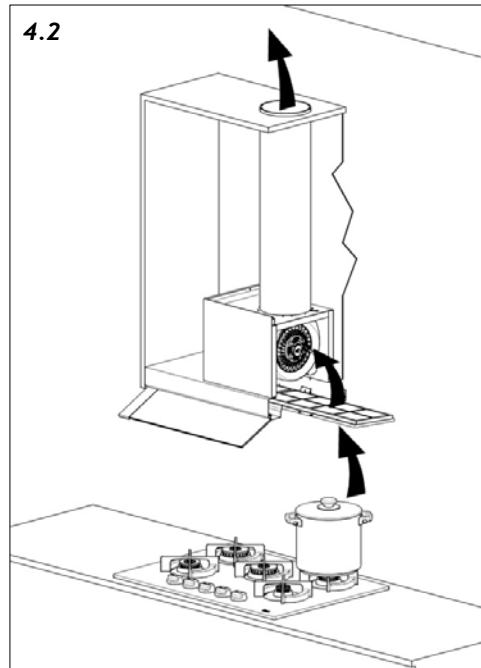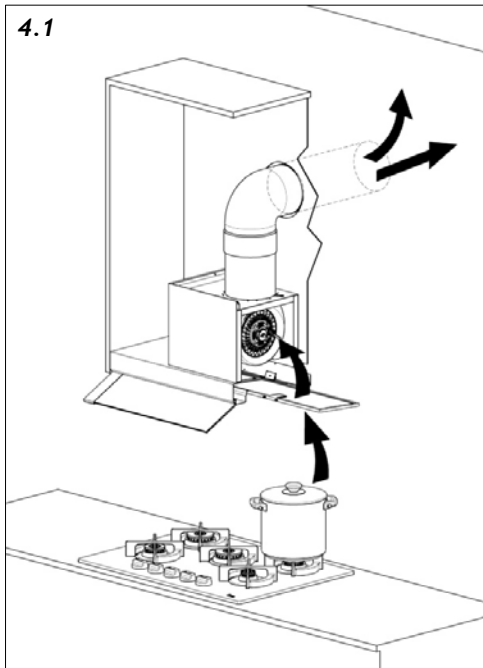

Worldwide Appliances Pty Limited**A.B.N. 45868077422****Distributed by Eurolinx pty Ltd****Office:**

48-50 Moore Street, Leichhardt N.S.W 2040 Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your Artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the Artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at

www.eurolinx.support Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to Artusi or assist Artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the Artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your Artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact Artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY**1. Warranty**

Worldwide Appliances warrants that each Artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 MONTHS WARRANTY PRODUCTS:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. WHAT IS NOT COVERED BY THE WARRANTY.

The Warranty does not apply if an Artusi product is defective by a factor other than a defect arising in the manufacture of the Artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the Artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised Artusi service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by Artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the Artusi product handbook provided to the purchaser upon purchase of the Artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the Artusi in respect of an Artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in Artusi products.

3. DOMESTIC USE

Each Artusi product is made for domestic use. This Warranty may not extend to Artusi products used for commercial purposes.

4. TIME FOR CLAIM UNDER THE WARRANTY

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

5. PROOF OF PURCHASE

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an Artusi product.

6. CLAIMING UNDER THE WARRANTY

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. STATUTORY RIGHTS

- (a) These terms and conditions do not affect your statutory rights.
- (b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:
 - (i) contravene the law of the relevant jurisdiction; or
 - (ii) cause any part of the Warranty to be void.
- (c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the Artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.
- (d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:
 - (i) replacing or repairing the defective part of the Artusi product;
 - (ii) paying the cost of replacing or repairing the defective part of the Artusi product;
 - (iii) replacing the Artusi product; or
 - (iv) paying the cost of replacing the Artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. DEFECTS

Any part of an Artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test Artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

All warranty service calls must be booked via the customer care department.

The team can be contacted on 1 300 85 64 11 option 1 or

customercare@wwa.com.au

**DON'T FORGET TO REGISTER YOUR
WARRANTY ONLINE NOW AT**
wwa.com.au/warranty-registration/



NOTES:

[illegible]

NOTES:

[illegible]

ARTUSI

FOLLOW US ON:



/artusi_kitchen_laundry_outdoor

artusi.com.au

Australia National Telephone Number 1300 694 583

Our showrooms opening hours in each state are available on our website

NSW & ACT (Head Office)

48-50 Moore Street
Leichhardt

Victoria

2r/131 Church
Street Hawthorn

QLD

Contact
head office

WA & NT

Contact
head office

DISCLAIMER

Worldwide Appliances PTY LTD, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of Artusi & Artusi and are not authorised to bind Artusi or Artusi by any express or implied undertaking or representation.