

A photograph of a man and a young girl in a home setting. The man, wearing a blue and white plaid shirt and dark jeans, is standing and hugging the girl from behind. The girl, wearing a pink sweater and blue jeans, is standing and hugging him. They are both smiling and looking down at each other. The background shows a doorway and some household items.

APPLIANCES FOR LIVING

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**
LEICHHARDT NSW 2040

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.

Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.

All our appliances are only for domestic use, not for commercial use. Products marked with (*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

HOOD DUCTING GUIDE

Here are some important points to consider when choosing and/or installing a range hood:

- An externally ducted range hood will generally outperform a recirculating range hood.
- We discourage the use of flexible ducting as this has a significant negative impact on airflow and noise due to turbulence
- caused by the ribs. Instead consider using semi-rigid or rigid duct.
- Avoid using a narrower duct than specified as this will reduce airflow; the best performance is obtained when the range hood is installed with a short duct with minimal bends.
- To determine the required clearance between the cooktop and the range hood always consult the installation manual for both the range hood and cooktop. The required clearance is the greater of the distance specified in either manual (and a minimum of 600mm between the highest point of the highest burner for gas cooktops).
- Five metres is the recommended maximum length for ducting (see diagram 1.). When the ducting exceeds five metres in length the installation of a TD500 or TD350 in-line motor is required, which must be placed one metre from the external vent (see diagram 2.).

Diagram 1.



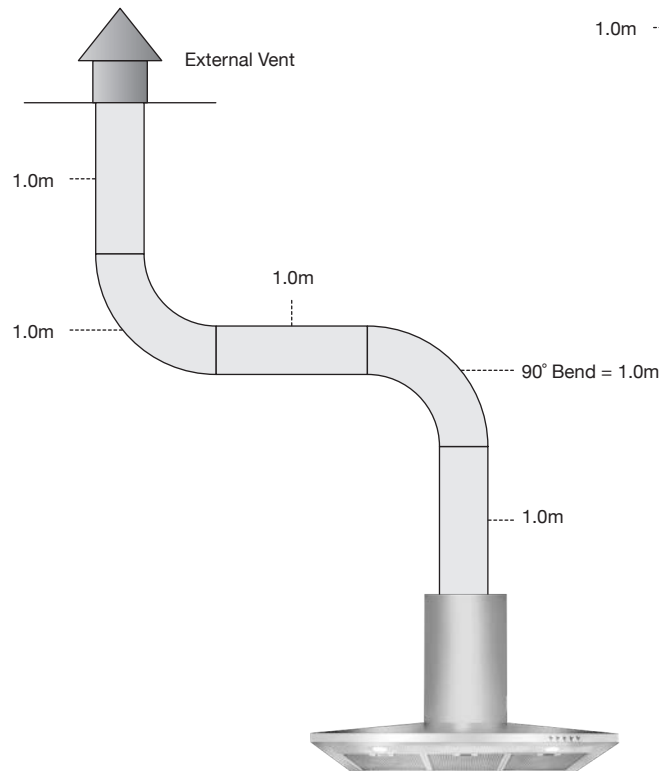 


Diagram 2.

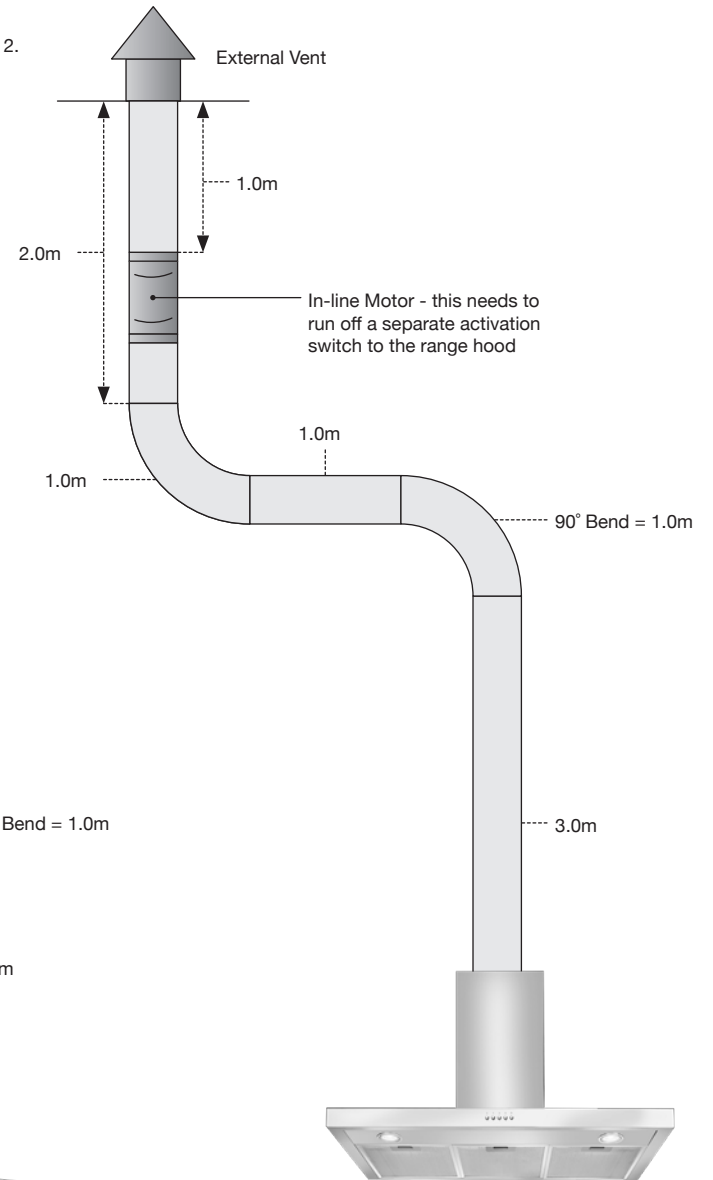 

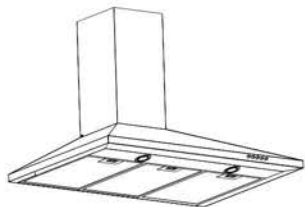 

Information and advice

 
Specifications: 220-240V~50Hz 198W

CAUTION: Accessible parts may become hot when used with cooking appliances.

In certain circumstances electrical appliance may be a danger hazard.

- A) There shall be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels.
- B) Do not check the status of the filters while the cooker hood is operating.
- C) Do not touch the light bulb within half an hour after appliance use.
- D) Do not flame under the cooker hood.
- E) Avoid opening gasometer when there is no pan on the stove, as it is damaging for the filters and a fire hazard.
- F) Constantly check food frying to avoid that the overheated oil may become a fire hazard.
- G) Disconnect the electrical plug prior to any maintenance.
- H) Regulations concerning the discharge of air have to be fulfilled.
- I) When the range hood and appliances supplied with energy Other than electricity are simultaneously in operation.


The negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar)

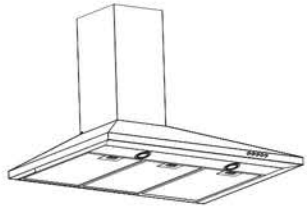

Information and advice


Specifications: 220-240V~50Hz 198W

 - J) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- K) Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room.
- L) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- M) The range hood is intended to be installed over a hob having no more than four hob elements.
- N) Indoor use and household use only.
- O) When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- P) Attention! Observe the warning in the instruction sheet concerning the operation of the appliance when air is discharged from the room.
- Q) The lamps must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

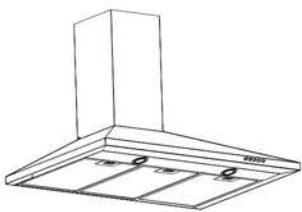

Know your cooker hood

 Please read these instructions before using your cooker hood

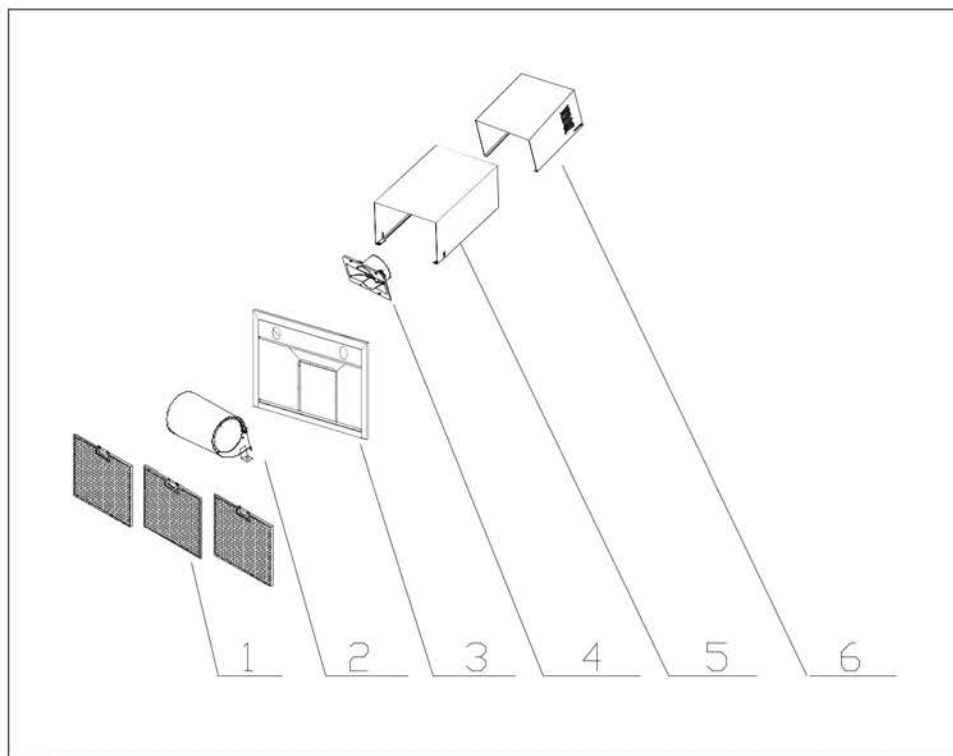

1.Filter assembly

3.Main body assembly

5.Outside chimney

2.Air duct assembly

4.Damper flap

6.Inner chimney

***Also included**

*** Damper flap**

*** Chimney fixed bolster**

 
 
 
 
***Drill hole stencil *User instructions**

 


Information


Congratulations on the purchase of our Cooker hood, which is designed to include many superior features that permit you the fullest expression of your living. Before installing and/or using the cooker hood carefully read all the instructions.

Production Dimension

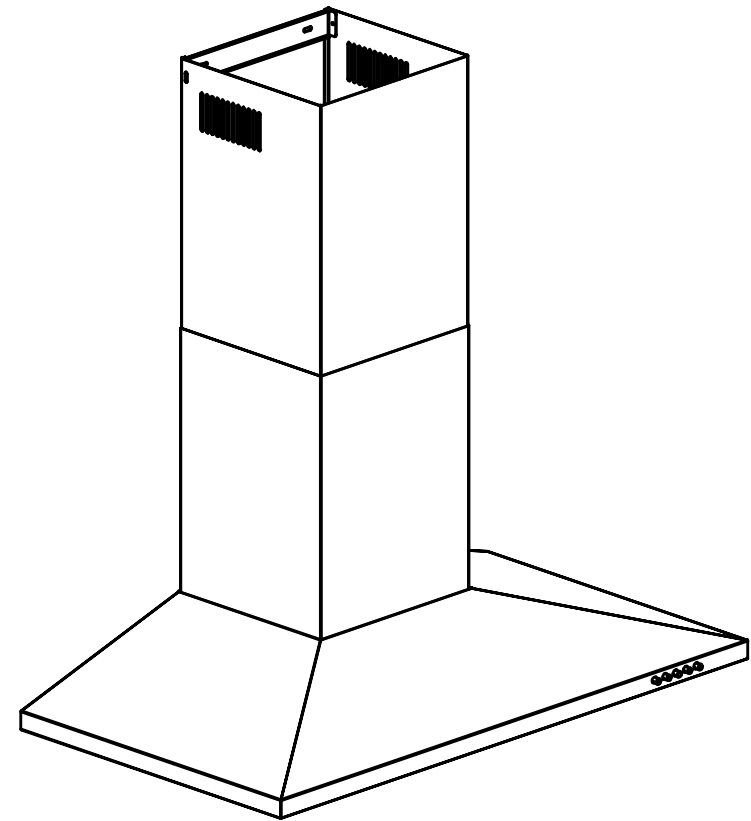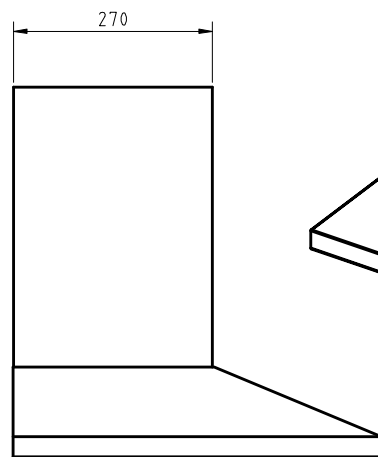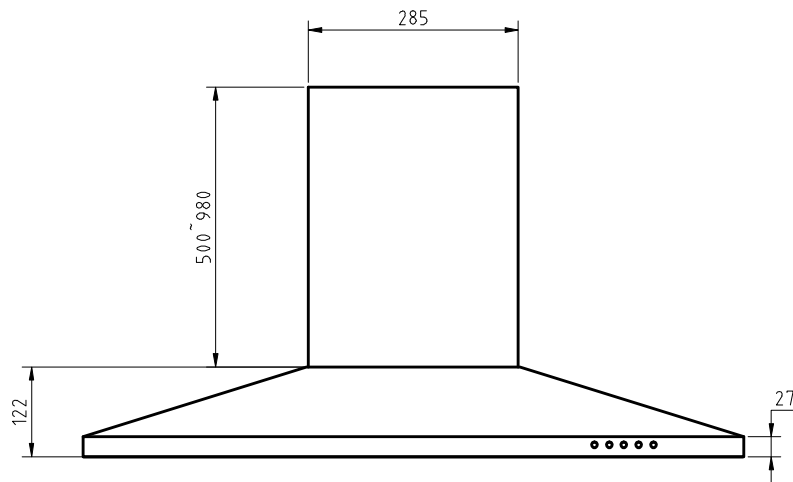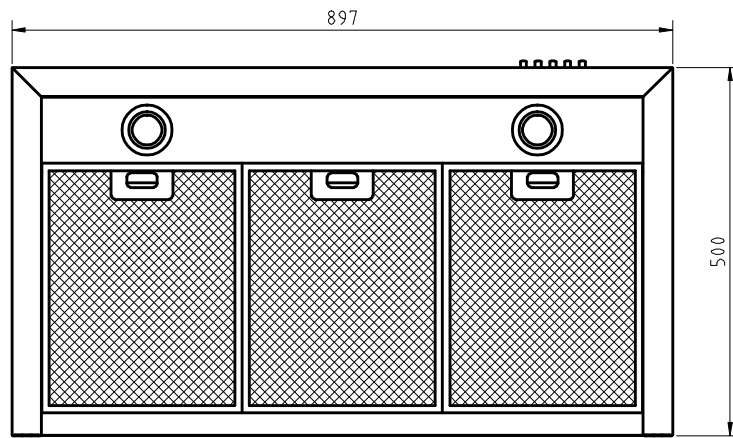


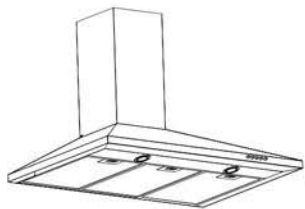

Information and advice

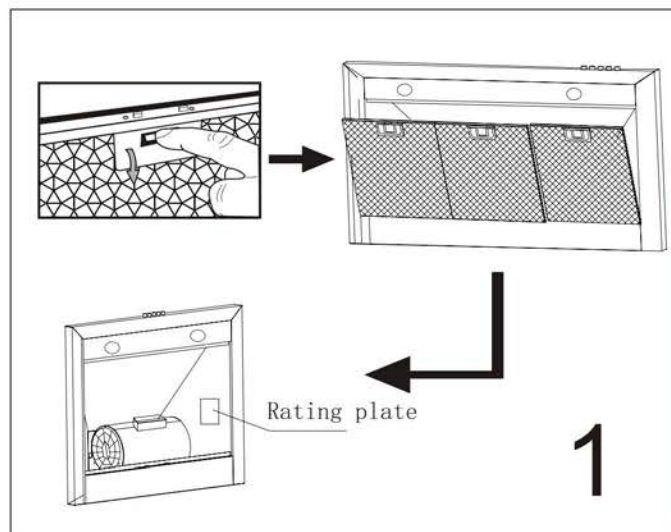 

 Check voltage and Frequency given on the rating plate located on the inside of the hood.

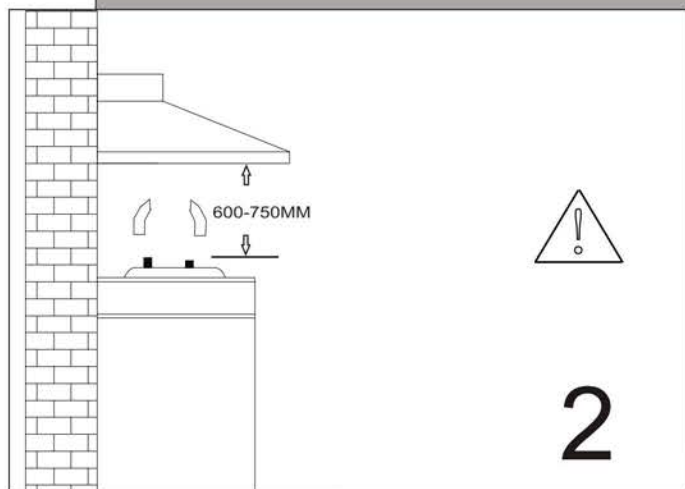


We recommend that after installation the bottom of the hood should be no less than 600mm and no more than 750mm above the stove's heating elements and burners.





Information

 The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room)

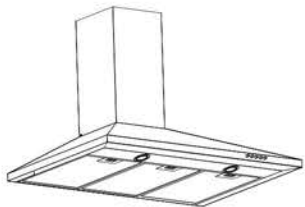

Installation

  Ensure the power has been turned off before beginning this installation.

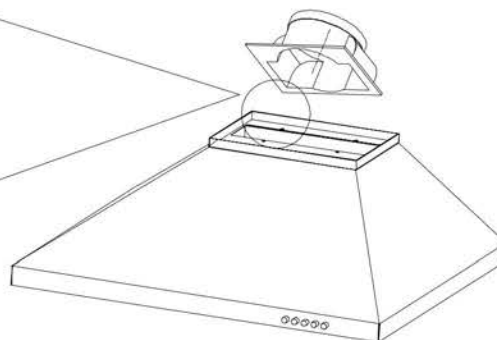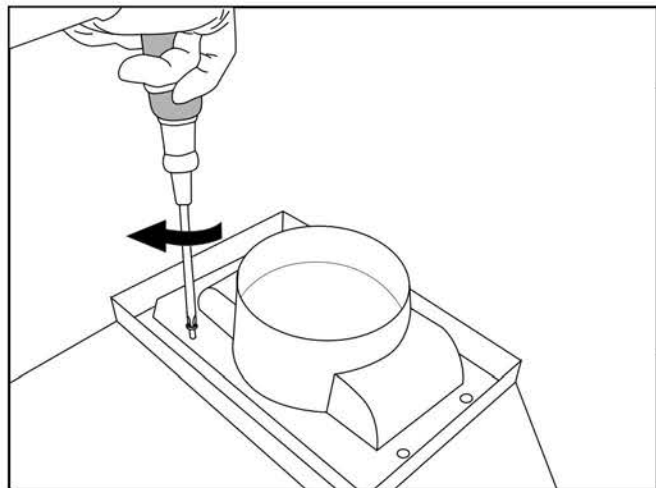


3



Information

Connect universal hose, easy selecting the venting direction

 Before installing the cooker hood, please first fix the damper flap on the air outlet of the hoods.

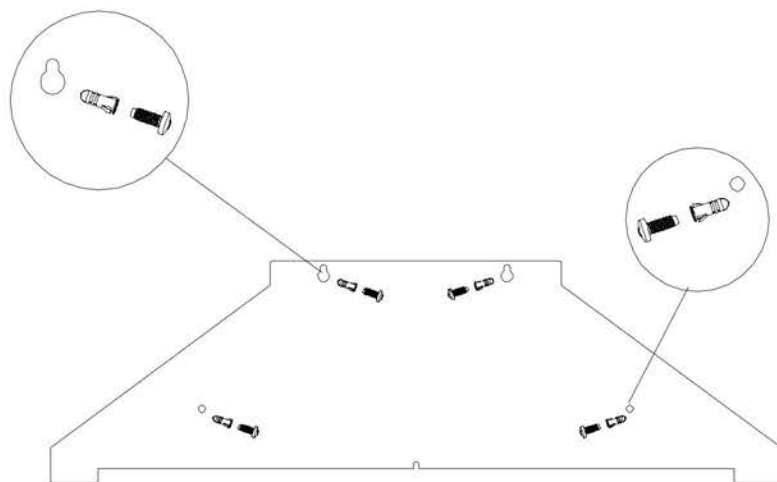


4

According to the Fig.4, make sure the position of the hoods on the wall. Then use the stencil to drill four $\Phi 8$ holes on the wall. Fix four sets expanding plugs and screws aimed at the four holes.




i

Information

 When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities.

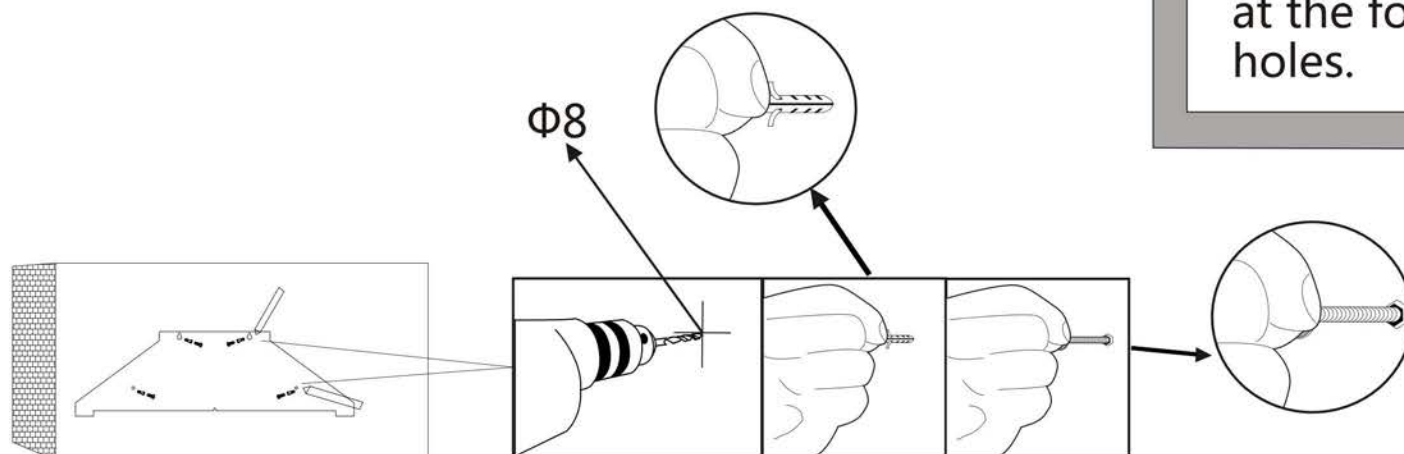

5

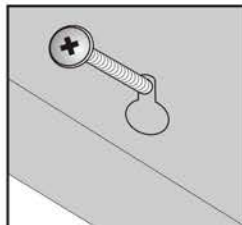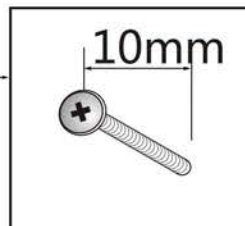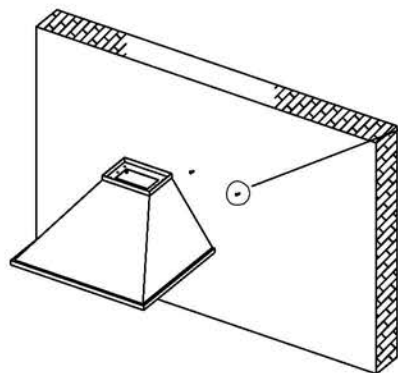   



6

Hang the hood and let its 4 installation holes aim at 4 screws, adjust it to setting position.




Information

  Please make sure the outside dimension of the screws is 10mm.

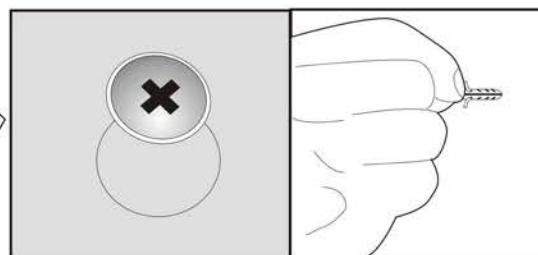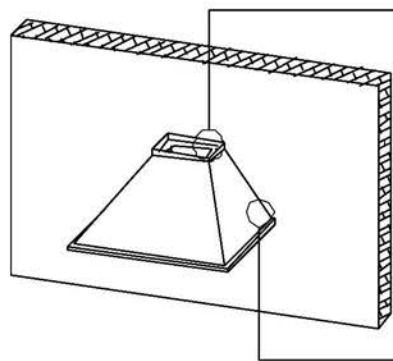

7

 
Screw down the four screws, first screw down the upper two screws, then screw down the other two screws.

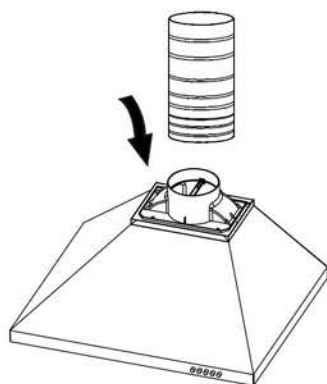

8


Connect the hose with the air duct.

 The cooker hood is fully convertible for different venting direction.

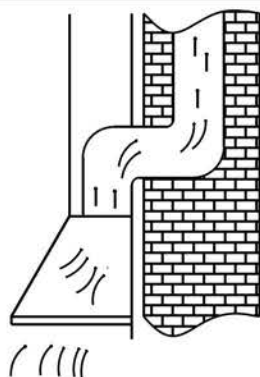

9

 Vertical is the most common. If your kitchen has an attic space above, the ducting may be run up through the cupboard and attic to a roof cap.

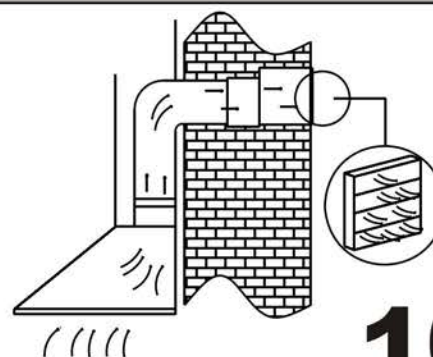


10

If your kitchen has a socket above the cupboards, you may run the duct up into the socket and then discharge horizontally through the outside wall to a wall cap.

i

Information

 The air must not be discharged into a fuel that is used for exhausting fumes from appliances burning gas or other fuels.

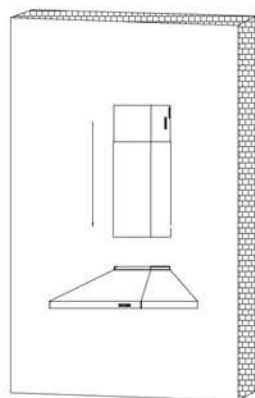


11

Put the outer chimney on the windshield, fix it on the air chamber with Phillips head screwdriver.




Information

 Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

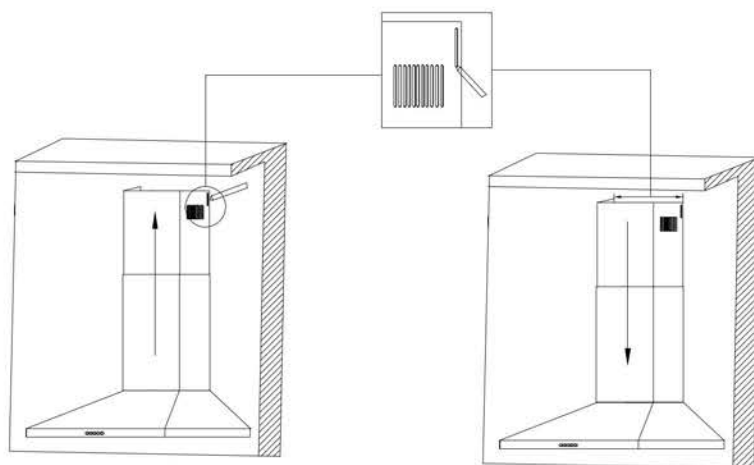

12

 According to the dimension of the chimney fixed bolster, make sure the position of the two chimneys.

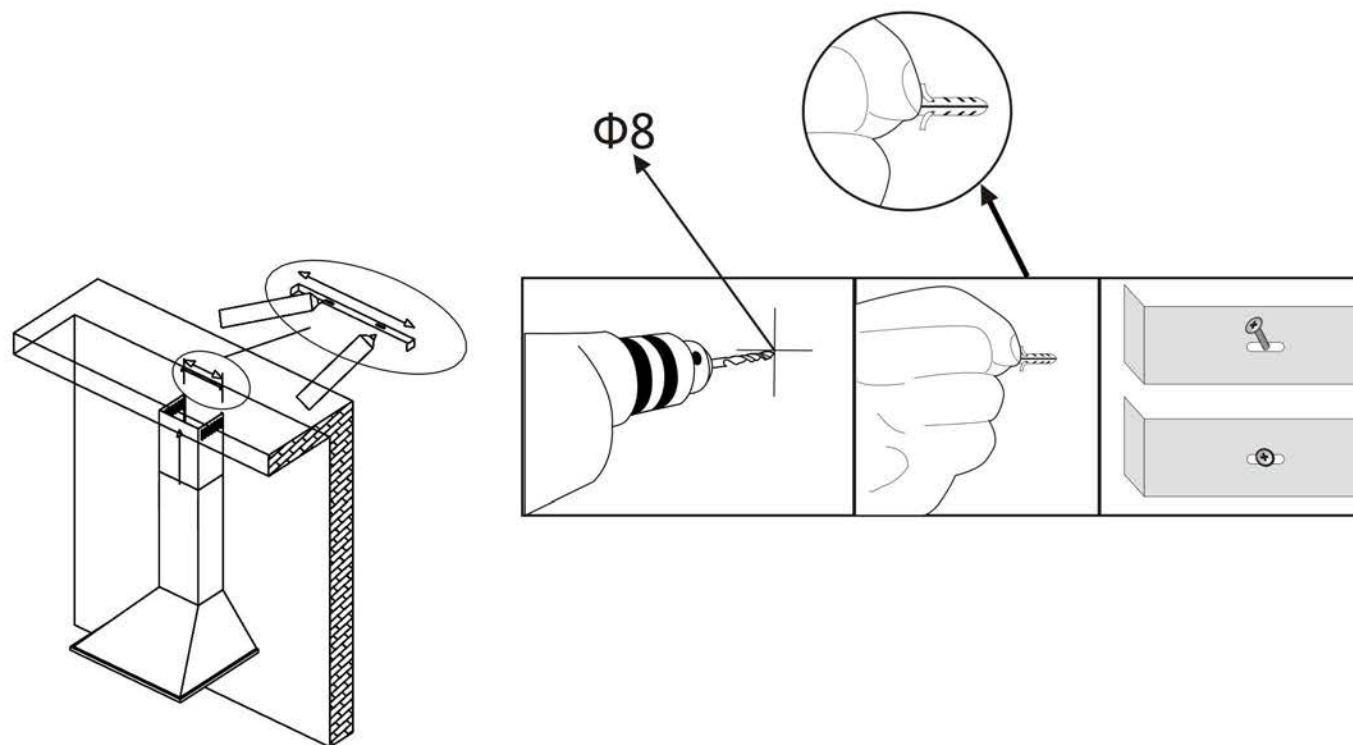



13

Install the chimney fixed bolster on the corresponding position on the wall.



Information

  To install this hood you will require two assistants

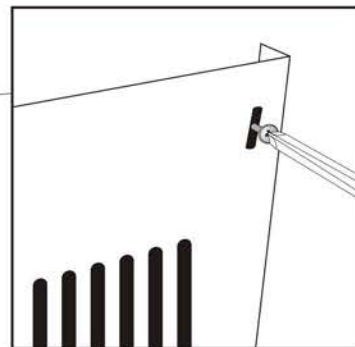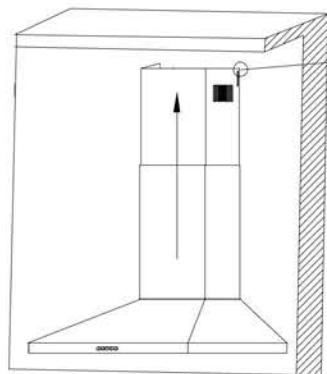

14

Use the Screw ST4*10 to connect the chimney fixed bolster and the upper chimney.

Controls



15

 
Press the switch of light to be on, the left and right lamps light on. Otherwise the lamps don't work. When pressing the push button "1" on, the motor runs at low speed. When pressing the push button "2" on, the motor runs at middle speed. When pressing the push button "3" on, the motor runs at high speed. When pressing the push button "0" on, the motor stops running.



Information

Do not touch the light bulb within half an hour after appliance use. The lamp shall not be covered with thermal insulation or other material

Replacement & maintenance

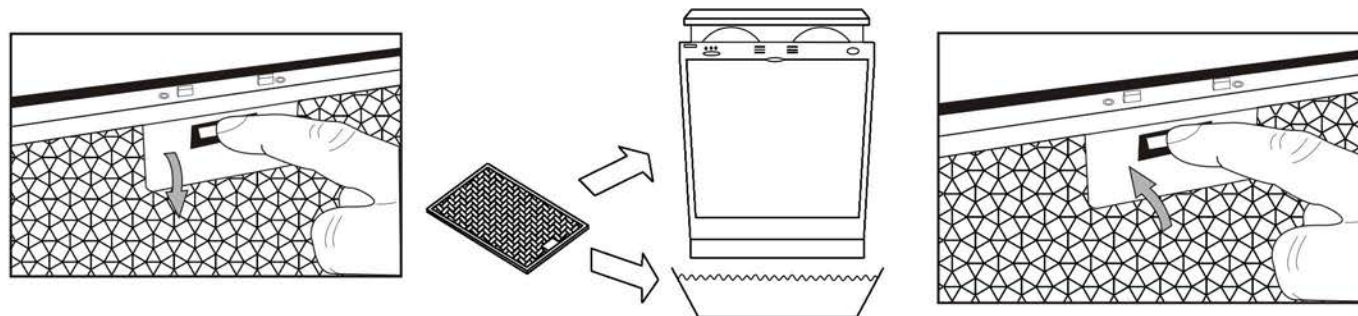

1. Clean the surface of the hood frequently using mild soap or detergent at least once every 3 months.
2. Avoid the use of harsh cleaning agents as it may spoil the hood's appearance.
3. Wash the filters using mild soap or detergent. Note that heavy grease build up may not be able to be cleaned and the filters should be replaced.
4. Never clean the charcoal filters. They must be replaced as necessary.

Install a charcoal filter as shown.

Note: The charcoal filter cannot be washed or cleaned and must be replaced as necessary.



Information

There is a fire risk if cleaning is not carried out in accordance with the instructions.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

The manufacturer shall decline all responsibility if the foregoing recommendations and instruction regarding installation, maintenance and use are not observed and respected when using the cooker hood.

006-V0101

21

20

19

18

22

17

16

15

14

13

12

11

10

9

8

7

6

5

4

3

2

1

立体图

22	2.03.10.0003	Capacity assembly	450VAC/50/60Hz/S3/Square/L=150/VH3	1	
21	1.11.01.0002	Square carbon box	PP/black/Fireproof V2	1	
20	2.01.06.0041	Support for inner chimney	Galvanize plate	1	
19	2.01.10.0017	Inner chimney	430SS	1	
18	2.01.10.0016	Outer chimney	430SS	1	
17	1.04.03.0013	electric box cover	PP/black/Fireproof V0	1	
16	1.01.01.0086	PCB board	AC:110-240V/50/60Hz/1.5W/LED light/switch/Only for AUSTG	1	
15	1.04.03.0012	Base of electric box	PP/black/Fireproof V0	1	
14	2.03.09.0004	Australian three flat plug power cord assembly	Black/L=200/VH3/three-core	1	
13	2.03.04.0005	Outlet assembly	PP/Fireproof V1/black	1	
12	1.09.01.0003	Hook	cold panel,white zinc plating	1	
11	2.03.01.0231	Body case	Galvanized plate/430 stainless steel	1	
10	2.03.06.0074	M2 motor housing assembly	AC220-240V/50Hz/195W/Plastic volute	1	
9	2.03.01.0230	Body shell assembly	430 stainless steel/galvanized plate	1	
8	2.01.06.0105	Switch box bracket	Galvanized plate	1	
7	1.04.04.0066	Switch box	PP/black/Fireproof V0	1	
6	1.01.07.0002	Switch	5 key/A03-20	1	
5	2.01.06.0058	wire clip	Galvanized plate	1	
4	2.01.03.0050	Back panel	430 stainless steel	1	
3	2.01.13.0010	Light board	430 stainless steel	1	
2	1.01.03.0002	Round LED light	DC12V/1.5W/Φ68/warm white/color temperature4000K	2	
1	1.03.12.0101	Aluminum filter	Stainless steel circle/Aluminum filter four layers	3	

序号	品号	品名	规格	用量	备注
品号	3.01.01.0591	品名	1010A-900/430不锈钢/商标:ARTUSI	规格	AC220-240V/50Hz/A03/澳洲插/LED 2*1.5W/M2/金属风鼓/塑料风轮/棕箱/钢面网五层/活性炭/不锈钢铁排
标记	处数	更改文件号	签字	日期	阶段标记
设计			标准化		质量
校对			审定		比例
审核			审批		1:12
工艺					共 页 第 页
					版本: A

1010A-900

爆炸图

佛山市顺德区西汇电器有限公司

零件代号

借通用件登记

描图

校描

旧底图总号

底图总号

签字

日期



Worldwide Appliances Pty Limited

A.B.N. 45868077422

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at www.artusi.com.au. Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration

Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY

1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods

Freestanding Cookers - Gas and Electric Models (900mm Width)

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in

12 months warranty products:

Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or

handling in transit (other than when Worldwide Appliances is responsible);

(f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control or Worldwide Appliances;

(g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor*;

(h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.

(i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;

(j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or

(k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display. The Warranty does not extend to light globes used in artusi products.

3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

- (i) contravene the law of the relevant jurisdiction; or
- (ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a

major failure.

8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

*To locate your closest artusi authorised service agent please contact us on 1300 652 100 or visit www.artusi.com.au

ALL SERVICE CALLS MUST BE BOOKED THROUGH AN AUTHORISED DEALER OR WARRANTY DEPARTMENT ON 1300 652 100 OR stokesaps.com.au/artusi-service

01032014



Warranty Card tear off

WARRANTY REGISTRATION CARD 01052013

Please complete and send to ARTUSI at: REPLY PAID 83617
LEICHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date: / /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ARTUSI on 1300 694 583)
1	
2	
3	
4	

01032014



DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)
48-50 MOORE STREET
LEICHHARDT
F 02 8569 4699

VIC, TAS & SA
1211 TOORAK ROAD
CAMBERWELL
F 03 9809 2155

QLD
1/42 CAVENDISH ROAD
COORPAROO
F 07 3397 0850

WA & NT
UNIT 10/55 HOWE STREET
OSBORNE PARK
F 08 9201 9188

NZ
PO BOX 11160
SOCKBURN CHRISTCHURCH
F 03 344 5906

P: 1300 649 583

ARTUSI.COM.AU