 


Crescent Ice Maker Free Standing Built-in

AIM4009B

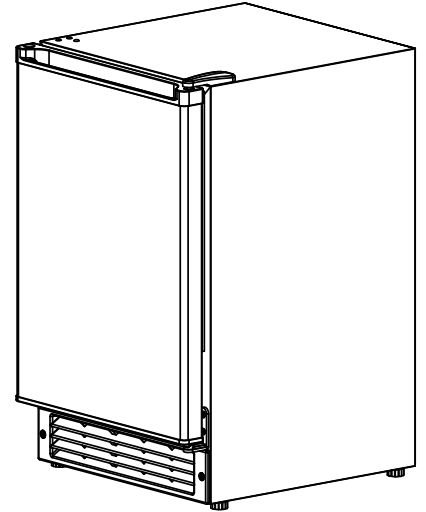



DANGER - Risk Of Fire Or Explosion. FLAMMABLE REFRIGERANT Used. Do Not Use Mechanical Devices To Defrost Refrigerator. Do Not Puncture Refrigerant Tubing.

DANGER - Risk Of Fire Or Explosion. FLAMMABLE REFRIGERANT Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.

CAUTION - Risk Of Fire Or Explosion. FLAMMABLE REFRIGERANT Used. Consult Repair Manual/ Owner's Guide Before Attempting To Service This Product. All Safety Precautions Must be Followed.

CAUTION - Risk Of Fire Or Explosion. Dispose Of Properly In Accordance With The Applicable Federal Or Local Regulations. FLAMMABLE REFRIGERANT Used.

CAUTION - Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. FLAMMABLE REFRIGERANT Used.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

POWER CORD PRECAUTIONS

- Do not use the appliance if the power cord is damaged. If the power cord is damaged, have a qualified electrician replace the power cord.
- Never lift, carry or drag the appliance by the power cord.
- Do not connect or disconnect the electric plug when your hands are wet.
- Never unplug the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.

MOVING PRECAUTIONS

- When moving the appliance, do not turn it upside-down and do not unlevel it more than 45 degrees.
- Do not move the appliance without emptying it and securing the door in the closed position.

INSTALLING PRECAUTION

- Connect to potable water supply only.
- The new hose-sets supplied with the appliance shall be used and that old hose-set should not be reused.

OTHER PRECAUTIONS

- To ensure proper ventilation for the appliance, keep obstructions away from the front of the unit.
- Keep fingers out of the “pinch point” areas. Clearance between the door and cabinet are necessarily small. Be careful closing the door when children are in the area.
- Do not touch the evaporator with your hand when the appliance is operating.
- Do not attempt to repair or replace any part of your appliance unless this manual specifically recommends it. Have a qualified technician perform all other service on the unit.
- Children 8 years of age and older and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance if they have been given supervision or instruction concerning use of the appliance in a safe way and they understand the hazards involved.
- Never allow children to operate, play with or crawl inside the appliance.
- Never allow children to clean and maintain the machine without supervision.
- Do not use the appliance other than for its intended purpose.
- Do not touch the condenser surfaces. They are sharp and can be easily damaged.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

CLEANING AND MAINTENANCE PRECAUTIONS

- Never clean the appliance parts with flammable fluids. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this appliance or any other appliances. The fumes can create a fire hazard or explosion.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may transmit taste to the ice cubes, or damage or discolor the interior.
- If the appliance will not be used for a long time, thoroughly clean it before the next use. Carefully follow any instructions provided for cleaning or the use of sanitizing solution. Do not leave any solution inside the appliance after cleaning.

DISPOSAL

The appliance cannot be treated as normal domestic trash, but must be handed in at a collection point for recycling electric and electronic appliances. Your contribution to the correct disposal of this product protects the environment. Further information about the recycling of this product can be obtained from your local municipal authority.

This appliance is intended to be used in household and similar applications such as


- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

The manufacturer disclaims any responsibility if the above instructions are not followed.


CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT OVERVIEW AND SPECS	3
INSTALLATION	
Before Using Your Ice Maker	7
Installation The Ice Maker	7
Reversing The Door Swing	8
Electrical Connection	9
Extension Cord	10
Connecting The Water Supply	10
OPERATING	
Initial Start-Up Operation	11
MAINTENANCE	
Cleaning Your Ice Maker	12
Power Failure	12
Vacation Time/Storage	13
Moving Your Ice Maker	13
Energy-Saving Tips	13
TROUBLESHOOTING	13
WARRANTY CARD	16

 Front View

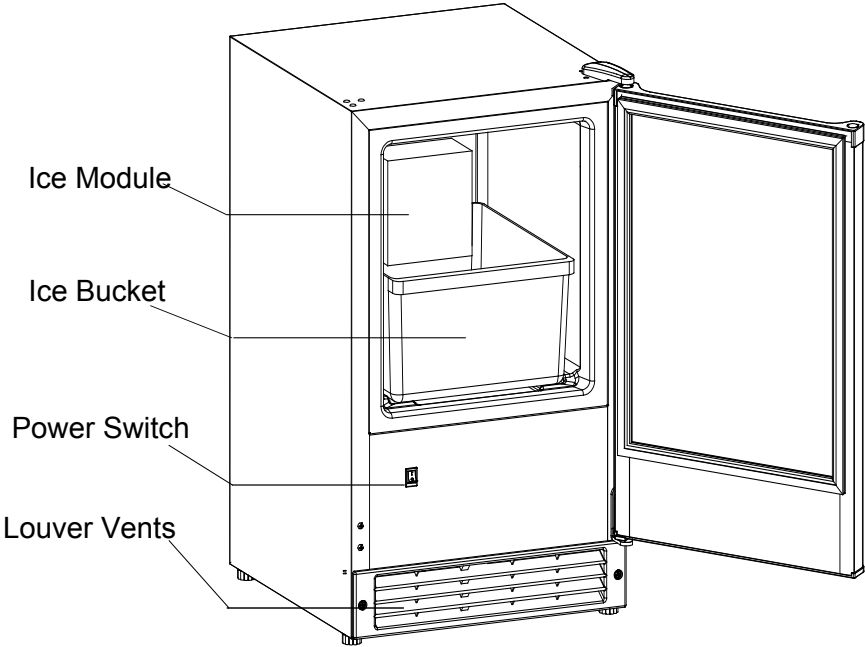


Back View

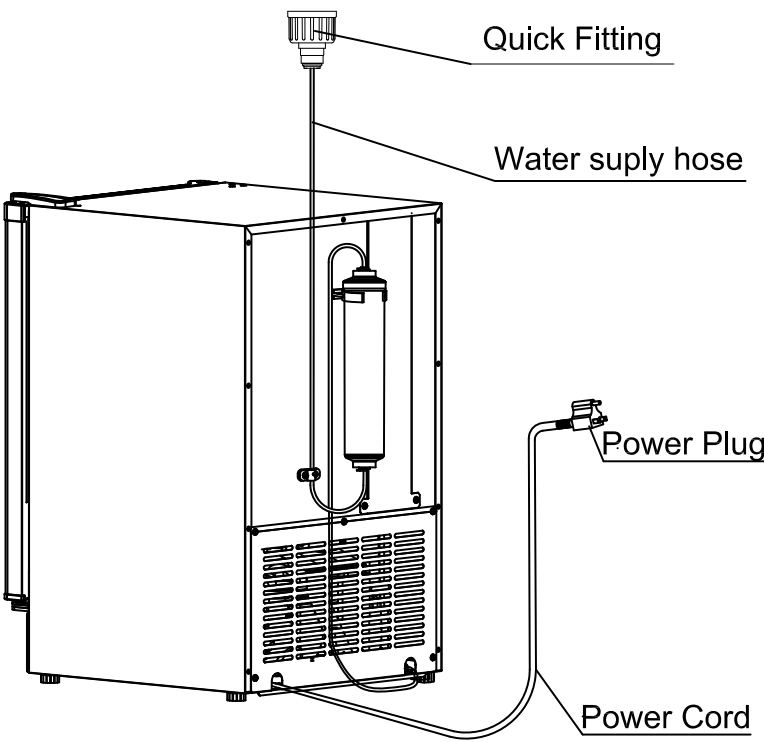 

Accessories



 Ice Scoop

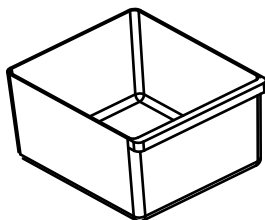

Ice Bucket



Quick Fitting



In Line Filter



Filter Clip

Specification

Model Number	AIM4009B
Voltage/Frequency	AC 220-240V 50Hz
Rated Ice Making Current / Power	1.0A / 121W
Rated Ice Harvesting Current / Power	0.9A / 177W
Refrigerant	R600a, 42g
IP Rating	IPX4
Indoor/Outdoor	Indoor
Installation Type	Free Standing / Built-in
Working temperature	10°C - 43°C
Ice Storage Capacity	5 Kg
Ice-Making Capability at 10 °C	9 Kg/day*
Ice Shape	Crescent
Ice Cube Dimensions (Approximate)	12 x 20 x 63 (mm)
Product Dimensions	378 x 432 x 634 (mm)
Net Weight	23Kg

*The actual quantity of ice produced per day will vary with ambient room and water conditions.

Note: Technical data and performance information are provided for reference only and subject to change.

INSTALATION

Before Using Your Ice Maker

Remove The Exterior And Interior Packaging material.

Check To Be Sure You Have All Of The Following Parts:

 
- 1 Ice Bucket
- 1 Ice Scoop
- 1 In Line Filter and 1 Filter Clip
- 1 Instruction Manual
- 1 Quick Fitting [For Connecting Water Supply]

Before Connecting The Ice Maker To The Power Source, Let It Stand Up right for Approximately 4 Hours. This will Reduce The Possibility Of A Malfunctionin The Cooling System From Handling During Transportation.


- Clean the Interior Surface with Lukewarm water Using A Soft Cloth.

Installation The Ice Maker


- The appliance shall not exposed to rain even for the model with ipx4.
- This appliance is designed to vent hot air through the front vent. This allows for installation in a recessed or built-in application, if desired.
- Place your ice maker on a level surface that is strong enough to support the ice maker when it is fully loaded. Remember that the unit will be significantly heavier once it is operational and fully loaded. Level your ice maker by adjusting the legs at the front of the icemaker.
- Locate the ice maker away from direct Sunlight and sources of heat (stove, heater,Radiator, etc.). Direct sunlight may affect the finish and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the ice maker malfunction. This ice maker is designed for installation indoors in “room temperature” ambient conditions.
- Position unit to allow free airflow Through the front grille , avoid locating the ice maker in moist/humid areas. Too much moisture in the air will cause frost to form quickly on the Evaporator requiring frequent defrosting.

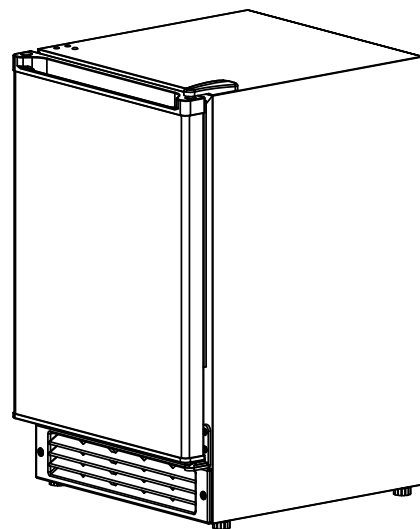

UP  DOWN

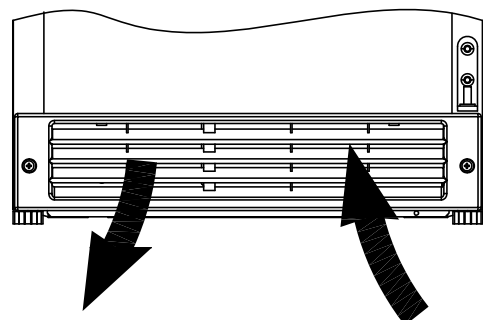 

- Plug the ice maker into an exclusive properly installed grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
- **The product is designed and manufactured for seamless integration in the specified cutout opening shown, which requires precise measurements. The opening must be square and plumb front to back. Although not required, you may choose to increase the overall cutout width for ease of installation.**

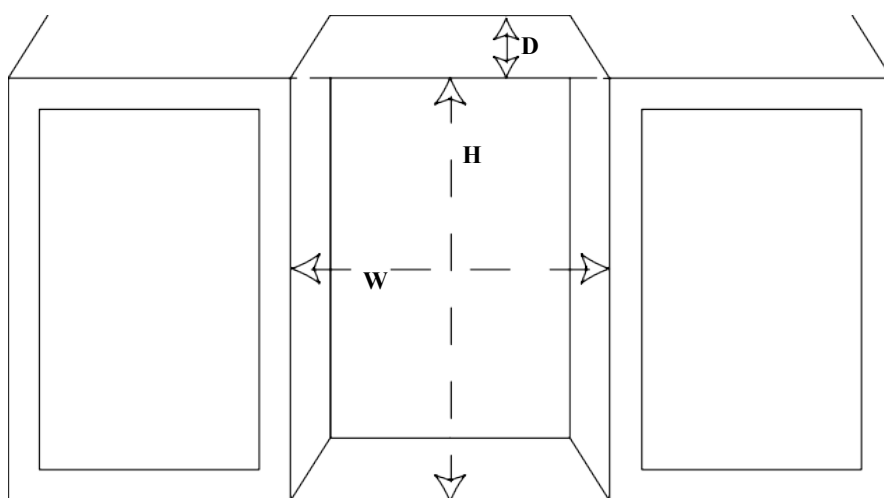 

We recommend to leave at least 50mm for back, 10mm for top and sides.


Model Specifications Table			
Model	Specifications	Dimensions(mm)	Cutout Dimensions(mm)
AIM4009B	Width	378	398
	Depth	432	500
	Height	634	644

Reversing The Door Swing

This appliance has the capability of the door opening from either the left or right side. The unit is delivered to you with the door opening from the left side (hinged on the right).

Tools needed: flathead screwdriver, Phillips screwdriver

 IMPORTANT: *Before you begin, Make sure the ice maker is unplugged.*

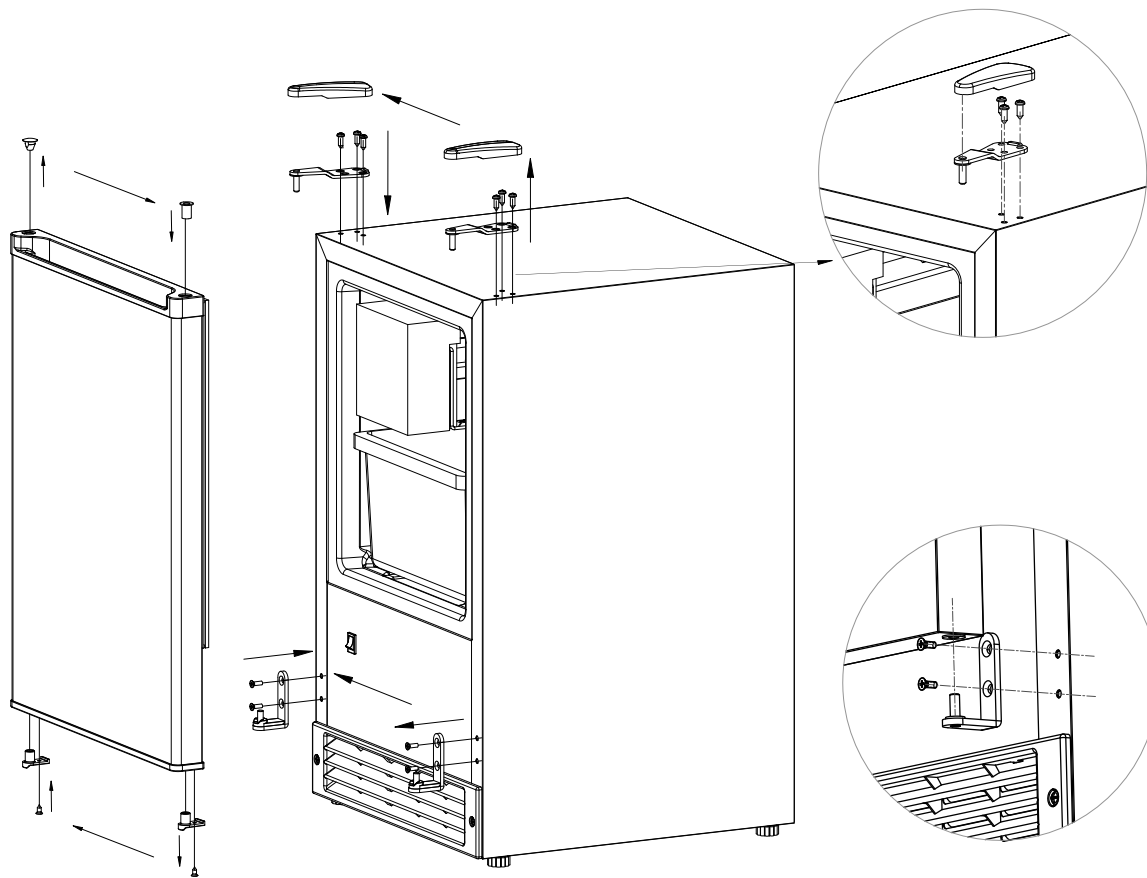

1. Open the hinge cap on the top hinge and unscrew the three (3) bolts to take away the top hinge and then lift out the door.
2. Replace the plastic covers on the top left and right of the door, Move the bottom hinge sleeve of the door from the right to the left.
3. Get access to the bottom hinge, Install on the left side of the cabine.
4. Cover the right screw holes by the decorative plugs from the left.
5. Aligen the door to the bottom hinge and insert the door, then install the top hinge and put the hinge cap on it.

Electrical Connection

- This ice maker should be properly grounded for your safety. The power cord of this ice maker is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electrical shock.
- Do not under any circumstances cut or remove the third ground prong from the power cord supplied.
- Do not use an extension cord to connect power to the unit.
- Do not use a two-prong grounding adapter.
- If you only have a two-prong wall receptacle, contact a qualified electrician to have it replaced with a 3-prong receptacle in accordance with applicable electrical codes.
- This ice maker requires a standard 220-240 volts A.C. 50Hz electrical outlet with three-prong ground.
- The cord should be secured behind the ice maker and not left exposed or loose

Extension Cord

Because of potential safety hazards, this appliance is not recommended for use with an extension cord. However, if you must use an extension cord, use only a UL/CUL-listed, 3-wire grounding type appliance extension cord with a grounding type plug and outlet. The electrical rating of the cord must be 115 volts and at least 10 amps.

Connecting The Water Supply

 
WARNING: Connect to potable water supply only.

All the necessary hardware is not provided (as the plumbing fixtures at the installation point may differ) for installation so it is necessary to hire a professional licensed plumber to complete the installation.

- Connect the water supply tube to the nearest cold water source. Connect sufficient tubing to the unit to allow the appliance to be moved freely for cleaning and service. Also make sure that the tubing is not pinched or damaged during transportation/installation.
- wipe out inside of unit and ice bucket with a damp cloth.

Filter Installation Instructions

Tools needed: Phillips screwdriver

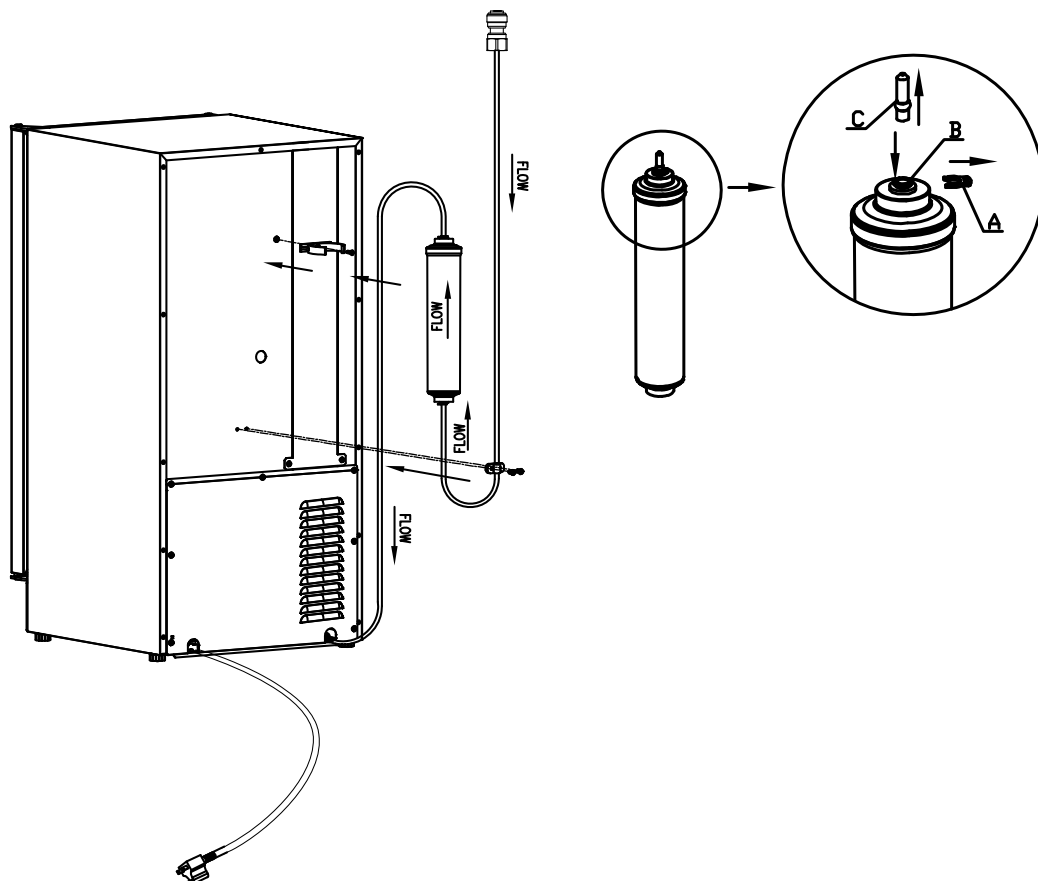

1. Connect the filter to the potable water supply

Remove the blue clip to remove the plug of the filter, then connect the filter to portable water supply by insert the water supply tube to the inlet end of the filter, Reinsert the clip to lock the tube.

2. Purge

Run water for 5 minutes to purge the system and check for leaks. This is a MUST.

3. Ice Maker Connection

Cut off the water hose to proper length, we recommend keeping the water hose length at least 21". Remove the blue-clips and Insert the water supply hose of the ice maker to the outlet end of the filter, reinsert the clip to lock the tube, then run water to check leakage.

4. Fixing the filter

 
Use a screwdriver to install the filter clip on the back of the unit and fix the filter to the clip. install the water line clip on lower back of the unit to fix the water tube.

NOTE: The water filter must be replaced every 6-12 months depending on the water quality.

OPERATING

Initial Start-Up Operation

1. Plug the appliance into a 220-240V polarized and grounded Wall electrical outlet.
2. Place the on-off switch in the "I" position.
3. Make sure the water supply is on. As soon as the inner Mechanism reaches the proper temperature, the icemaker Mechanism will fill the mold with water.
4. The first cubes may be small because of air in the water Line. Later cubes will be of standard crescent type size.
5. Approximate time for the first cycle is between 30-40 Minutes.
6. Each cycle approximately will take 140g of water so you should have a full tray, after 11 hours.

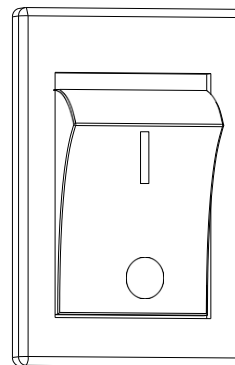

IMPORTANT: Throw away all ice cubes made during the first 3 hours of operation.

- When the ice bucket is full, the ice making mechanism will automatically shut off. When ice cubes are melted, the ice making mechanism will start again .
- Ice delivery may be interrupted by raising the metal arm into an upright position
- If the icemaker is not used regularly, it is recommended that the ice bucket be emptied periodically to insure fresh ice.
- Sometimes the cubes may appear cloudy. This is due to the rapid freezing of the ice cube. This is trapped air in the water and does not affect the taste and quality of the ice.
- The front grille should be kept free of dust and lint to allow free airflow.

IMPORTANT: This unit should be defrosted approximately every 4-6 weeks or when frost on the ice maker walls is excessive or 5mm thick.

 
If the ambient temperature is above 43 °C, defrosting should be more often or the ice production will be affected.

To defrost, turn the unit off, remove cubes and keep door open at least two inches.

MAINTENANCE

Cleaning Your Ice Maker

- Turn the switch control to "0", unplug the ice maker and remove the bucket.
- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the bucket with a mild detergent solution.
- The outside of the ice maker should be cleaned with mild detergent and warm water.
- The stainless steel components of the door should be cleaned with stainless steel cleaner
- The condenser coils should be vacuumed when they are dusty or dirty.

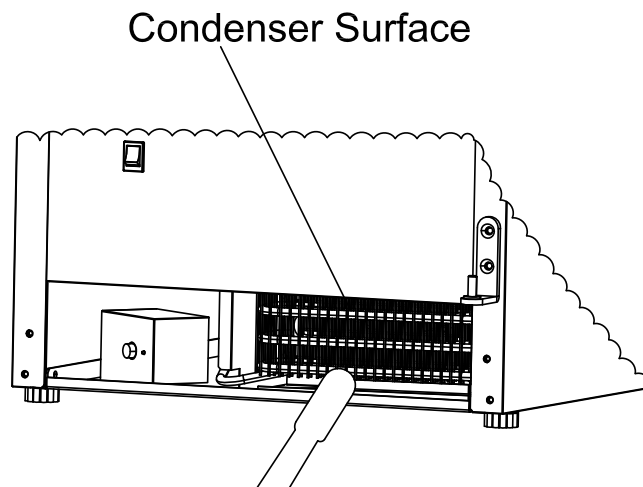

CAUTION

Failure to unplug the ice maker when cleaning, moving, or servicing it could result in electrical shock or personal injury.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your ice maker if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you should take the proper steps to disconnect your appliance.

Vacation Time/Storage

1. Shut off the water supply at the main water valve.
2. Disconnect the water supply line from the valve.
3. Pour away the water and ice that in the ice bucket.
4. Allow the unit to run for an hour or two until all remaining ice cubes have been ejected and all water has cycled through the system and has been made into ice cubes.
5. Disconnect the unit from the main power source.
6. Dry out excess water from the ice maker assembly
7. Leave the door open at least two inches

Moving Your Ice Maker

- Securely tape down all loose items inside your ice maker.
- Turn the leveling screws up to the base (their shortest length possible) to avoid damage.
- Tape the door shut.
- Make sure the ice maker stays in the upright position during transportation..

Energy-Saving Tips

- The ice maker should be located in the coolest area of the room, away from heat sources, and out of the direct sunlight.

TROUBLESHOOTING

Before Calling for Service:

If the unit appears to be malfunctioning, read through the “OPERATING ” section of this manual first. If the issue persists, check the Troubleshooting Guide below. Some of the problems mentioned in the Troubleshooting Guide can be solved easily without a service call.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Probable Correction
The ice maker doesn't operate.	The ice maker is unplugged.	Plug in the ice maker.
	The breaker is tripped.	Check the breaker. If the problem occurs again, call for service to check for a short circuit in the unit.
	The ice maker's power button is set to OFF.	Switch the ice maker's power button to ON.
	If the ambient temperature is over 43 °C the ice maker may overheat and initiate a protective stop to prevent damage.	If the protective stop occurs, do not restart the unit until the ambient temperature is lower than 30 °C .
	The ice storage bin is full of ice or wire shut-off arm is locked in the up position.	Remove some of the ice. Be sure the wire shut-off arm is lowered.
The water doesn't feed in after the ice maker starts.	The water supply tap is turned off.	Turn on the water supply tap.
	Water inlet valve malfunction	Call Service.
	The water supply pipe is not properly connected.	Reconnect the water supply pipe.

Problem	Possible Cause	Probable Correction
Water is leaking out of the unit.	The water supply connection is leaking.	Tighten the fitting.
A small amount of water in the ice bin	First initial cycle may add extra water and cause the ice module to overflow.	This is normal, wipe up excess water and check next cycle.
No ice is produced.	The wire shut-off arm is locked in the upright position.	Lower the wire shut-off arm.
	Refrigerant leak.	Call Service.
	Ice Module malfunction.	Call Service.
	No water is being supplied to the unit.	Turn on the water or contact a plumber.
The machine makes ice, but at a very slow rate.	The condenser is dirty.	Clean the condenser.
	The air flow to the ice maker is obstructed.	Check the installation to ensure the air flow to the ice maker is not blocked.
	The ambient temperature is high, or the unit is near a heat source.	Check the installation to ensure the ambient temperature is in the proper range.
The ice cubes are partially formed.	There is not enough water in the water trough.	Check if the water supply pressure is below 20 psig. The water supply or filter may be restricted.
	The thermostat may have been adjusted to the highest temperature setting.	Adjust thermostat towards the COLDEST.
Abnormal Ice, melting or formed together	The ambient temperature is high, or the unit is near a heat source.	Adjust thermostat towards the COLDEST.
	The door gasket does not seal properly.	Check the door is properly closed.
	Power Off.	Check power supply.
	Refrigerant leak.	Call Service.
The unit accumulates frost and has to be defrosted often.	Door isn't properly closed door left open for too long when retrieving ice.	Defrost the ice maker as needed. Keep the door closed as much as possible.
	High humidity environment	Increase the defrost frequency.
There is noise during operation.	The unit may not be leveled and secure.	Level and secure the unit.

PN:1866844000



MANUFACTURER'S DECLARATION

The manufacturer hereby declares that the products in this catalogue, depending on their type, comply with the essential requirements of the European Directives. Therefore, the product has been CE-marked and a declaration of conformity has been issued, available to the relevant market regulatory authorities.

DISPOSAL OF USED APPLIANCES

At the end of their useful life, these household appliances must not be disposed of with normal municipal waste. Instead, they must be taken to a collection and recycling point for electrical and electronic equipment. This is indicated by the symbol on the product, in the instruction manual or on the packaging.

The materials used in the appliance can be reused in accordance with their intended purpose.

Thanks to the reuse, recycling of materials or other forms of reuse of unusable appliances, you will be contributing to the protection of our natural environment.

Information regarding disposal points for unusable appliances will be provided by the competent local authorities.



The manufacturer declines all responsibility for inaccuracies in this catalogue due to typographical errors. We reserve the right to make improvements or essential changes to the products without altering their essential specifications. The products may be subject to modifications as a result of improvements and CE regulations.

Worldwide Appliances Pty Limited**A.B.N. 45868077422****Distributed by Eurolinx pty Ltd****Office:**

48-50 Moore Street, Leichhardt N.S.W 2040 Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your Artusi product is important to us.

We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the Artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide

Appliances Privacy Policy is available at www.artusi.com.au.

Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless.

required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to Artusi or assist Artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the Artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your Artusi product.

Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact Artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY**1. Warranty**

Worldwide Appliances warrants that each Artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 MONTHS WARRANTY PRODUCTS:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. WHAT IS NOT COVERED BY THE WARRANTY.

The Warranty does not apply if an Artusi product is defective by a factor other than a defect arising in the manufacture of the Artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the Artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised Artusi service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by Artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the Artusi product handbook provided to the purchaser upon purchase of the Artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the Artusi in respect of an Artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in Artusi products.

3. DOMESTIC USE

Each Artusi product is made for domestic use. This Warranty may not extend to Artusi products used for commercial purposes.

4. TIME FOR CLAIM UNDER THE WARRANTY

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

5. PROOF OF PURCHASE

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an Artusi product.

6. CLAIMING UNDER THE WARRANTY

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. STATUTORY RIGHTS

- (a) These terms and conditions do not affect your statutory rights.
- (b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:
 - (i) contravene the law of the relevant jurisdiction; or
 - (ii) cause any part of the Warranty to be void.
- (c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the Artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.
- (d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:
 - (i) replacing or repairing the defective part of the Artusi product;
 - (ii) paying the cost of replacing or repairing the defective part of the Artusi product;
 - (iii) replacing the Artusi product; or
 - (iv) paying the cost of replacing the Artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. DEFECTS

Any part of an Artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test Artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

All warranty service calls must be booked via the customer care department.

The team can be contacted on 1 300 85 64 11 option 1 or

customercare@wwa.com.au

**DON'T FORGET TO REGISTER YOUR
WARRANTY ONLINE NOW AT**
wwa.com.au/warranty-registration/





FOLLOW US ON:



/artusi_kitchen_laundry_outdoor

artusi.com.au

Australia National Telephone Number 1300 694 583

Our showrooms opening hours in each state are available on our website

NSW & ACT (Head Office)

48-50 Moore Street
Leichhardt

Victoria

2r/131 Church
Street Hawthorn

QLD

Contact
head office

WA & NT

Contact
head office

DISCLAIMER

Worldwide Appliances PTY LTD, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of Artusi & Artusi and are not authorised to bind Artusi or Artusi by any express or implied undertaking or representation.