

# Instruction Manual

AIN119GWE / AOFDZ127XE / AUBF620X



# CONTENTS

|                    |    |
|--------------------|----|
| Safety             | 3  |
| Installation       | 9  |
| Temperature Guide  | 14 |
| Product Overview   | 16 |
| Operation          | 19 |
| Care & Maintenance | 20 |
| Troubleshooting    | 22 |
| Warranty           | 24 |

## **WARNING!**

The information in this document is subject to modification without any prior notice. Some models are available in dedicated countries only.

We offers no guarantee for our wine cellar if it is being used for any purpose other than that for which it was specifically designed. We cannot be held responsible for any error in this manual. is not responsible or liable for any spoilage or damage to wines or any other contents incidental or consequential to possible defects of the wine cellar. Warranty applies to the wine cellar only and not to the content of the wine cellar.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person being responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

Please don't put such as acidic items, flammable and explosive goods into wine cooler.

This equipment is intended for the storage and display of non-potentially-hazardous bottled or canned products only.

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses and by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Catering and similar non-retail applications.

**DANGER: Risk of child entrapment. Before you throw away your old wine chiller:**

- Take off the doors;
- Leave the shelves in place so that children may not easily climb inside;
- When disposing of the appliance, do so only at an authorized waste disposal centre.

**R600a WARNINGS:**

For your safety observe the following recommendations.

- This appliance contains a small quantity of R600a refrigerant which is environmentally friendly, but flammable. It does not damage the ozone layer, nor does it increase the greenhouse effect.
- During transportation and installation, ensure that the tubing of the refrigerant circuit is not damaged.
- Avoid using or manipulating sharp objects near by the appliances.
- Leaking refrigerant can ignite and may damage the eyes.
- In the event any damage does occur, avoid exposure to open fires and any device which creates a spark. Disconnect the appliance from the mains power.
- Thoroughly ventilate the room in which the appliance is located for several minutes.
- Notify Customer Service for necessary action and advice.
- The room for installing the appliance must be at least 1 cubic metre per 8 grams of refrigerant. The refrigerant quantity contained in this appliance is listed above in grams; it is also noted on the Rating Plate of the appliance.
- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

- The symbol  is a warning and indicates the refrigerant and insulation blowing gas are flammable.
- Warning: Risk of fire / flammable materials
- WARNING — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- WARNING — When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING — Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- WARNING — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.

**It is hazardous for anyone other than an Authorised Service Person to carry out servicing or repairs to this appliance.**

- WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- WARNING: If you do not use the machine for a long time, please unplug the power plug from the socket or switch off the power supply.
- WARNING: Children should be supervised to ensure that they do not play with the appliance;
- WARNING: Do not use extension cords or ungrounded (two prong) adapters;
- WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid hazard.

**Allow 24 hours before switching on the wine cellar. During this time we recommend that you leave the door open to clear any residual odors.**

### **Climate Pattern**

Climate pattern is the room temperature in which you can operate the device to maximum the cooling function.

Lower or higher room temperature may influence the device performance resulting in temperature fluctuation and failure to reach the desired temperature.

32°C±2°C on appliances of climatic class 0,1,2,3,4, 6 or 8;

43°C±2°C on appliances of climatic class 5 or 7

| Climate rating | Room temperature |
|----------------|------------------|
| SN             | +10 °C to +32 °C |
| N              | +16 °C to +32 °C |
| ST             | +16 °C to +38 °C |
| T              | +16 °C to +43 °C |

### **BEFORE LOADING & PLUGGING IN THE BEVERAGE COOLER**

Important: All models without front venting (air opening) are strictly for free standing only. (See technical chart)

#### **Recommendations:**

The location you have selected for your beverage cooler should:

- Be unencumbered and well ventilated;
- Be well away from any heat source and direct sunlight;
- Not be too damp (laundry, pantry, bathroom etc.);
- Have a flat floor;
- Have a standard and reliable electricity supply (standard socket to country standards, linked to the ground), it is NOT recommended to use a multi-socket or extension lead;
- Have a surge protector fitted to the electrical outlet;
- Away from the microwave oven. Certain microwave ovens do not have wave interference shield. When placed within 1 meter vicinity of the beverage cabinet, they may affect the operation of the beverage cabinet.

#### **Notes:**

- AINT119GWE, AOFDZ127X and AUBF620X are both built-in and free-standing type as per the drawings thereafter.

Beverage cooler should be placed where the ambient temperature is proper (please view the end of manual). If the temperature is above or below this range, it will affect the performance of the cooler. Placing in cold or hot temperature conditions may cause cooler's temperatures fluctuating, and it will not reach the ideal one.

#### Grounding instructions:

The beverage cooler must be grounded in case of wire leakage. Grounding reduces the risk of electrical shock. The beverage cooler is equipped with a power cord having a grounding wire and plug. The beverage cooler plug must be plugged into a properly affixed and grounded electrical outlet.

Note: In locations where there is frequent lightning, it is advisable to use surge protectors.

Improper use of the grounding plug can result in the risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood.

If the supply cord is damaged, it must be replaced by a qualified person in order to avoid electrical hazard.

## INSTALLING YOUR BEVERAGE COOLER

Unpack and remove all of the protection and adhesive strips from the packaging around and inside the beverage cooler.

The beverage cooler must be positioned such that the plug is accessible. Release the power cord. Move your beverage cooler to its final location. The beverage cooler should be installed in a suitable place where the compressor will not be subject to physical contact.

Leveling your beverage cooler: Beverage cooler must be leveled BEFORE loading your beverages.

Your beverage cooler is equipped with 4 adjustable feet to facilitate easy leveling. We recommends that you tighten the back feet to the maximum and adjust the front feet to level the beverage cooler.

## INSTALLATION INSTRUCTIONS FOR BUILT IN COOLERS:

1. "Built in" coolers are front venting but are not designed to be fully integrated behind a joinery door.
2. Please follow the installation diagram when installing built-in coolers. No less than the minimum installation dimension, or it will affect the venting of cooler.

3. Built-in coolers draw air from right of ventilation frame and expel through left of ventilation frame under the front door.
4. "Built in" coolers have a power switch located on the control panel so power point location is not critical.
5. The cooler requires a standard 220-240 volt/10 amp power point. (Or according to different countries specifications).
6. The power cord is 2.0m in length and is fixed on the right side at the back when looking from front of cabinet.
7. As with most appliances of today, the cooler has sensitive electronic components which are susceptible to damage through lightning and electricity supply faults. It is therefore advised to use a power surge protector to avoid problems of this nature.
8. Air vent on door must be provided for built-in coolers when a wood door installed. In Hot climate zone, an air vent or grid, with a minimum ventilation size of 200mm x 40mm MUST be cut out at the rear top of the back partitioning or at the top of either side of the partitioning, allowing cool fresh air full access to flow into the 30mm gap located at the rear of the cabinet.

This air vent or grid must not be opened on the same side as other appliances such as ovens or an area that is sealed and without access to fresh cool air. Failing to comply with the above specifications could result in WARRANTY void.

For AOFDZ127X precautions for use of outdoor unit:

1. The normal operating environment is 0-35 °C (the ideal operating environment temperature). It is forbidden to use it in an environment more than 43 °C or lower than - 20 °C. Over high temperature will cause material aging, release chemicals and reduce the service life of the product. Low temperature may lead to cracking risk and insufficient compensation of heating temperature.
2. Avoid direct sunlight and direct rain.
3. Avoid the use of power supply without grounding wire. When using mobile power socket outdoors, ensure that the socket is free from water and wet position and well protected.
4. It is forbidden to keep it outdoors for a long time when not in use.
5. The wheels shall be firmly fixed during transportation on the machine, and all articles in the machine shall be emptied.
6. It is forbidden to lay down the cabinet door during transportation.
7. For outdoor use, it should be placed on a flat ground with an inclination angle of no more than 5 degrees.
8. When placed on the ground with steps, a safe distance of 300mm shall be ensured between the wheels and the edge of the step.
9. When you do not move the machine, pls brake the wheels and prevent slipping.

10. For other restricted rules, please refer to local laws and regulations.

 
### **INSTALLATION DRAWINGS FOR BUILT IN COOLERS:**

*Note: The appliance must be positioned so that the plug is accessible after installed.*


### **DIMENSIONAL DRAWINGS:**

*It is built-in model inside cabinet, the cabinet should come with good ventilation space and no backplane, otherwise it will affect the wine / beverage cooler working normally. (Installation drawing as below)*


**AINT119GWE**

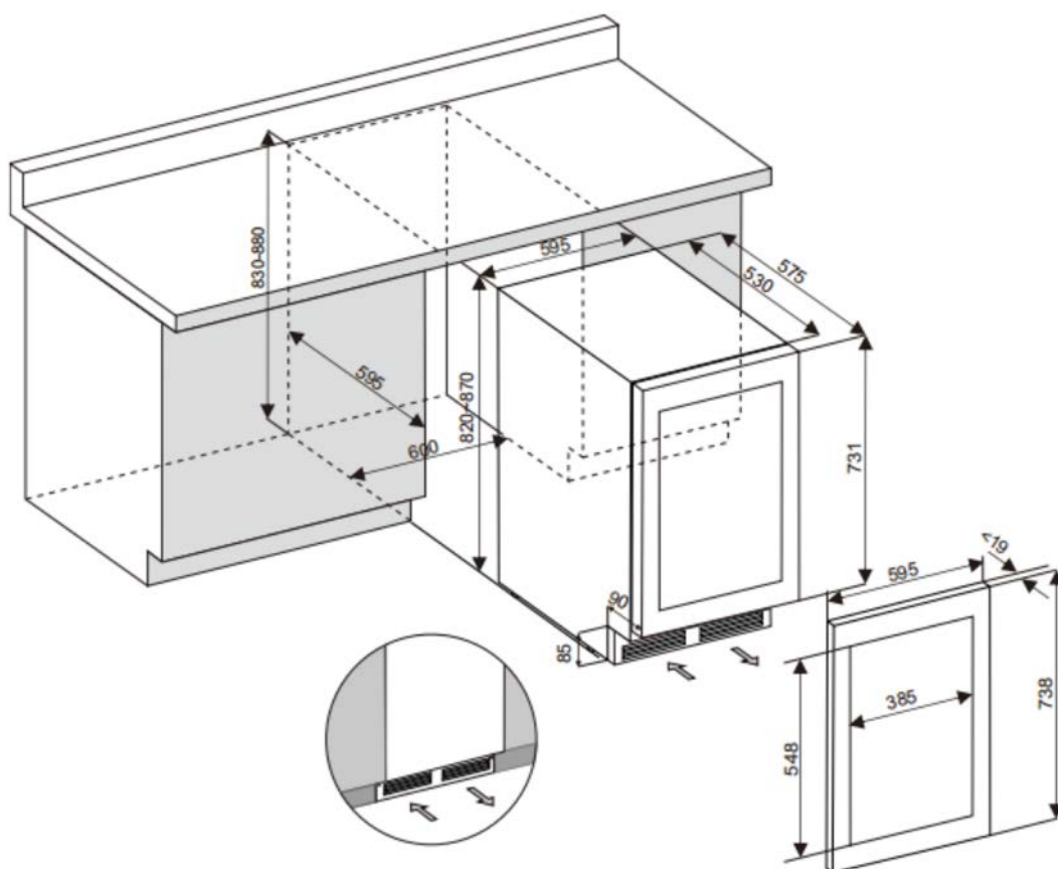

## AOFDZ127X

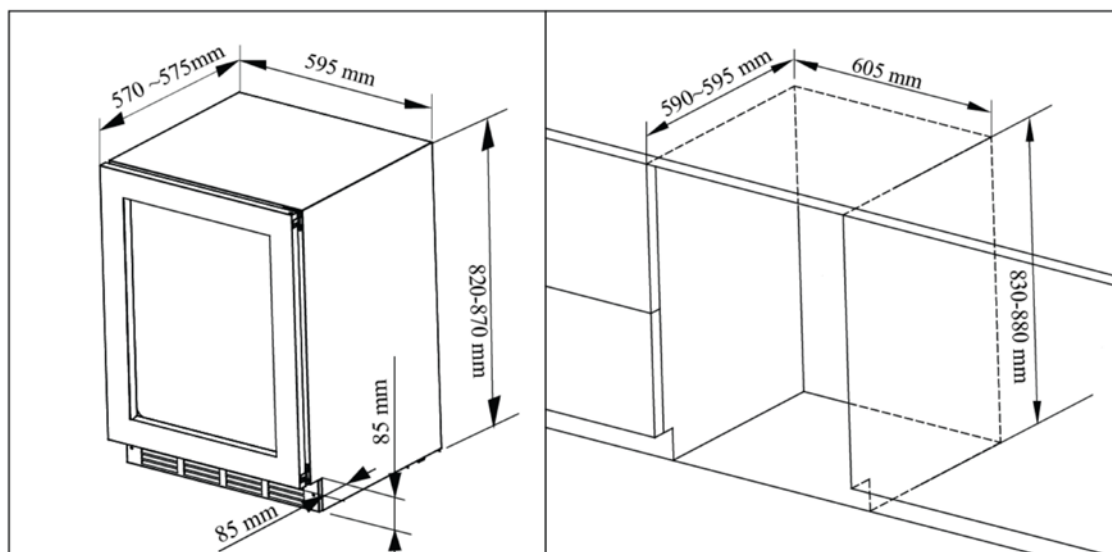 


## AUBF620X

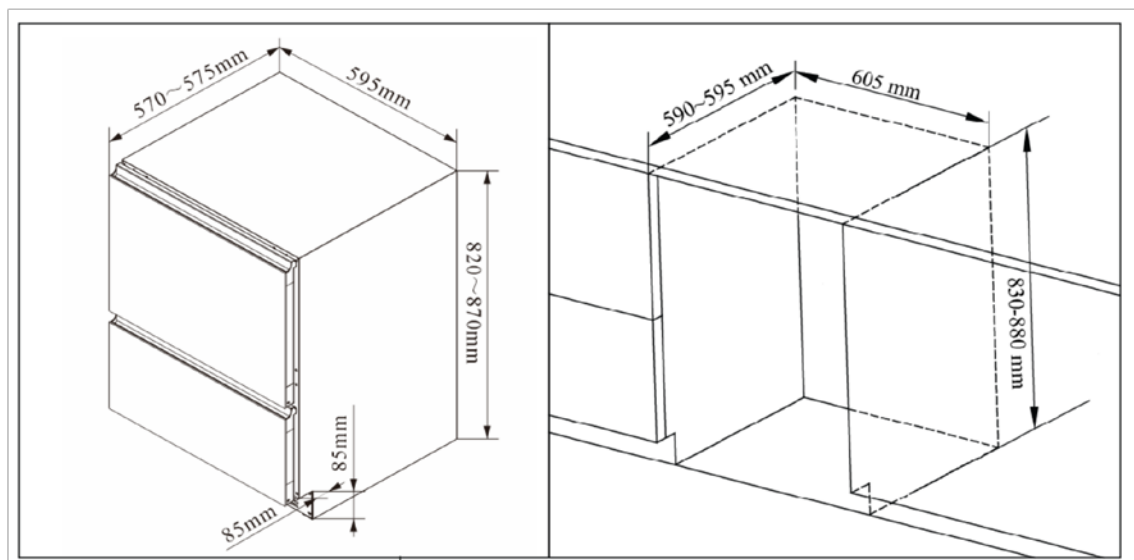 


## OPEN ANGLE SIZE DRAWINGS:
 
### AOFDZ127X

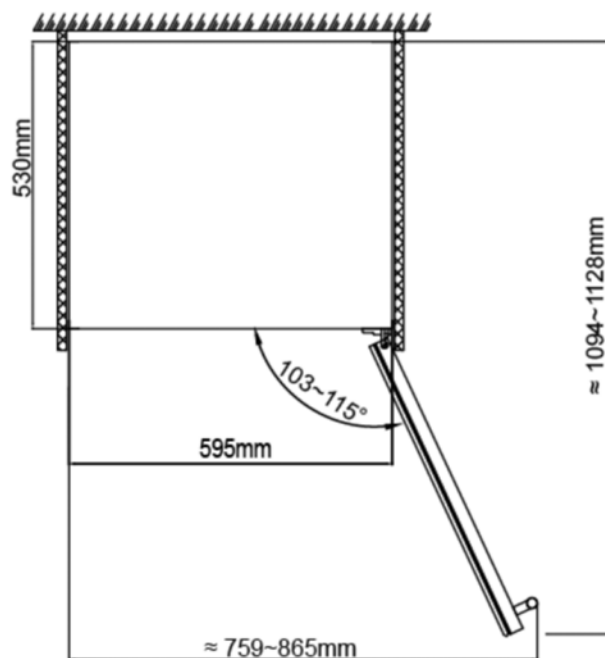


### AIN119GWE

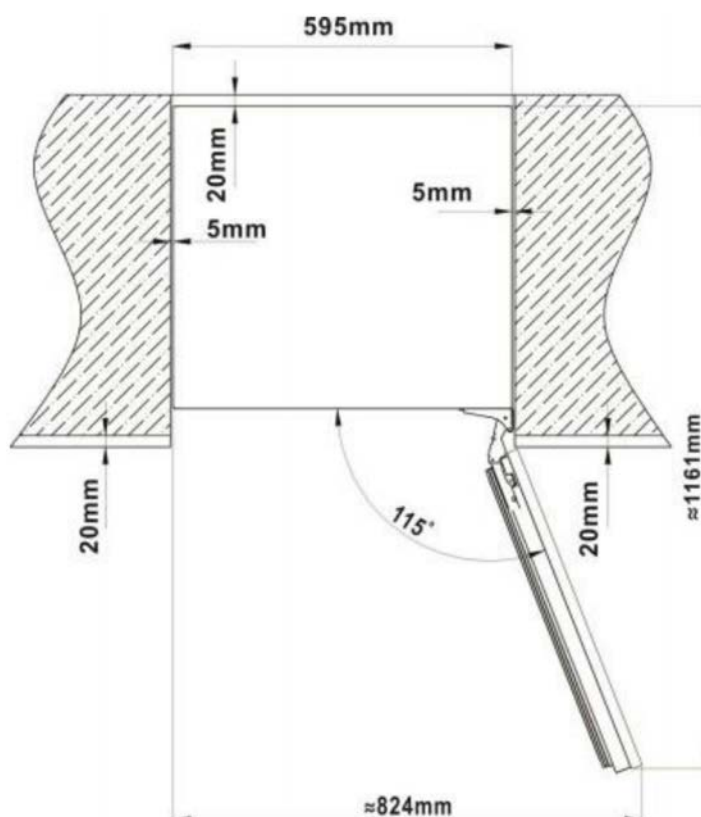 


## **RADIATOR SYSTEM DESCRIPTION**

 **AINT119GWE / AOFDZ127X uses side anti-dew tube and Independent cooling system:**

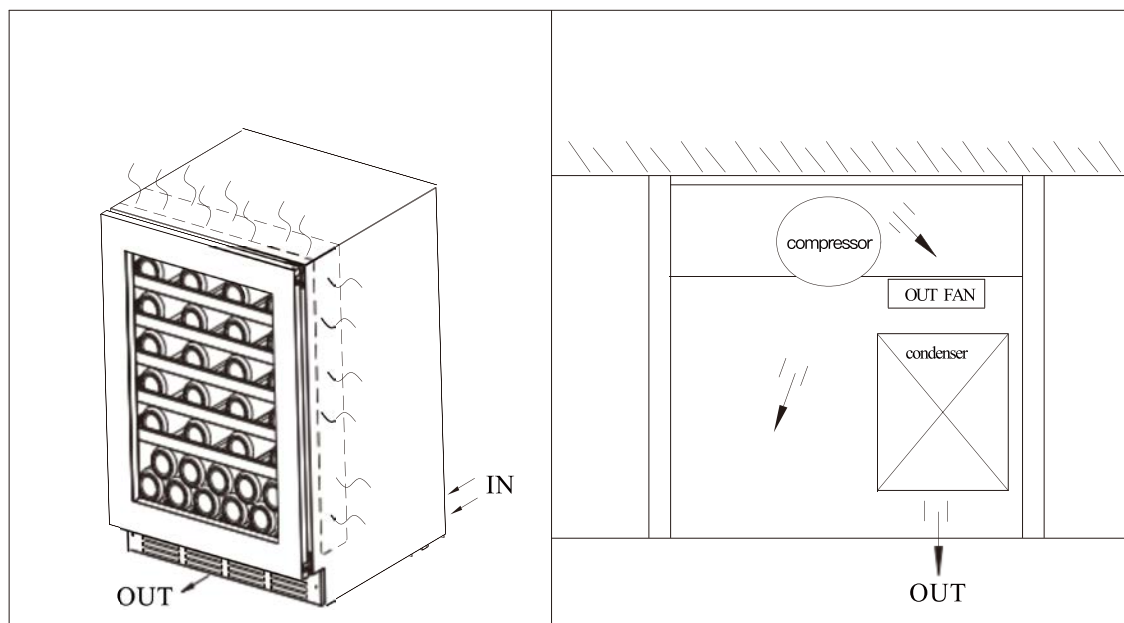

**AUBF620X uses side anti-dew tube and Independent cooling system:**

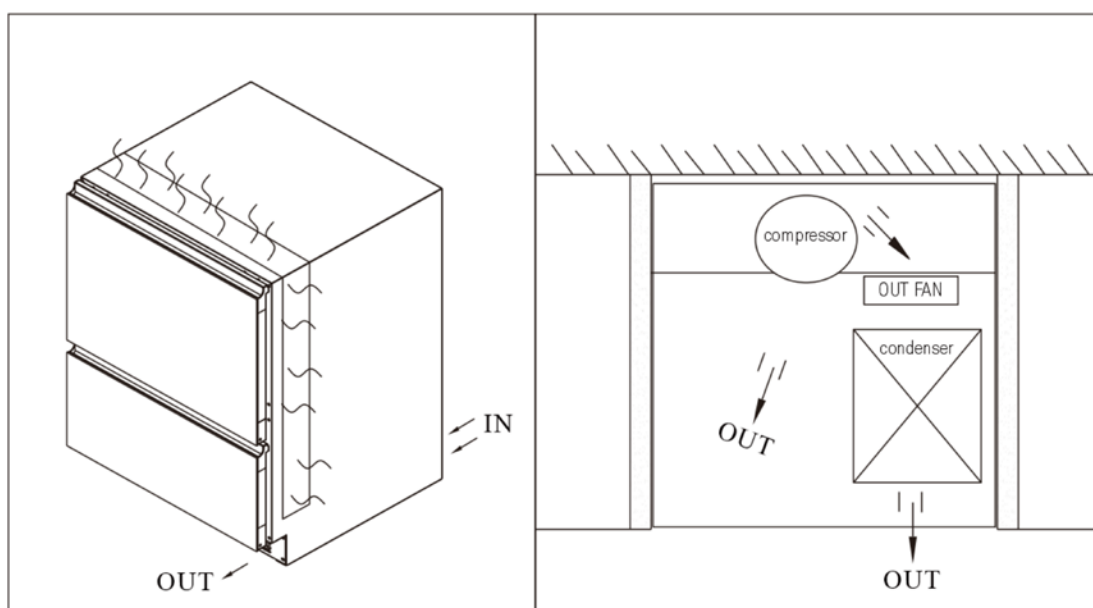 

## TURNING ON YOUR WINE / BEVERAGE COOLER

Plug in and switch on the cooler by pressing on the power button for a few seconds. When you use the beverage cooler for the first time (or restart the beverage cooler after having it shut off for a long time), there will be a few degrees variance between the temperature you have selected and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the beverage cooler is running for a few hours everything will stabilize.

**Important: If the unit is unplugged, power is lost, or turned off, wait 3 to 5 minutes before restarting the unit. The beverage cooler will not start if you attempt to restart before this time delay.**

### Operating Noises

To reach the desired temperature settings, Our beverage coolers, like all beverage coolers operating with compressors and fans, may produce the following types of noises. These noises are normal and may occur as follows:

- Gurgling sound - caused by the refrigerant flowing through the appliance's coils.
- Cracking/popping sounds - resulting from the contraction and expansion of the refrigerant gas to produce cold.
- Fan operating sound - to circulate the air within the beverage cooler.

An individual's perception of noise is directly linked to the environment in which the beverage cooler is located, as well the specific type of models. Our beverage coolers are in line with international standards for such appliance. We will always do its utmost to satisfy its customers but will not retake possession of the goods due to complaints based on normal operating noise occurrences.

## LOADING YOUR WINE / BEVERAGE COOLER

You may load your beverage bottles in single or double rows while taking note of the following: if you do not have enough bottles to fill your beverage cooler, it is better to distribute the load throughout the beverage cooler so as to avoid "all on top" or "all below" type loads.

- Do remove or relocate adjustable shelves to accommodate larger type of bottles or increase the capacity of the cooler by stacking the bottles up when necessary. (See removing shelves)
- Keep small gap between the walls and the bottles to allow air circulation. Like an underground cooler air circulation is important to prevent mould and for a better homogeneous temperature within the cooler.
- Load capacity with shelves: AINT119GWE / AOFDZ127X: max. 15kg



- Do not over load your beverage cooler to facilitate air circulation
- Avoid obstructing the internal fans (located inside on the back panel of the beverage cooler).
- Do not slide the shelves outwards beyond the fixed position to prevent the bottles from falling.
- Do not pull out more than one loaded shelf at a time as this may cause the beverage cooler to tilt forward.
- Do not cover the shelves with alloy foil or other materials, as it will obstruct air circulation.
- Do not move your beverage cooler while it is loaded with beverages. This might distort the body of the wine / beverage cooler and cause back injury.

## TYPES OF REGULATION

Please note that depending on the loading and settings chosen it takes about 24 hours for the beverage cooler to see the temperature stabilizing.

During this time LED seems to move erratically in particular, It is normal and this process occurs whenever the setting is modified and/or whenever a large amount of bottles are added to the cooler.

## TEMPERATURE SETTINGS

**Important: The LED displays by default the actual internal air temperature.**

*The temperature of the power, before all Settings will be resumed after the electricity to power the preset temperature*

*The electrical board of all models comes with memory function.*

*It is important to understand that there is a difference between the air temperature inside the wine / beverage cooler and the actual temperature of the wine / beverage: You will need to wait approximately 12 hours before noticing the effects of temperature adjustment due to the critical mass within a full beverage cooler.*

*Once the temperature is set, it is strongly advised not to toy with it or adjust frequently. The thermostat will maintain the temperature inside the beverage cooler*


## TEMPERATURE RANGE

AIN119GWE: upper zone 5 - 20°C , lower zone 5 - 20°C

AOFDZ127X: upper zone 5 - 20°C , lower zone 2 - 10°C

AUBF620X: 2 - 10°C
 
## AUBF620X DISPLAY BOARD OPERATING INSTRUCTION:

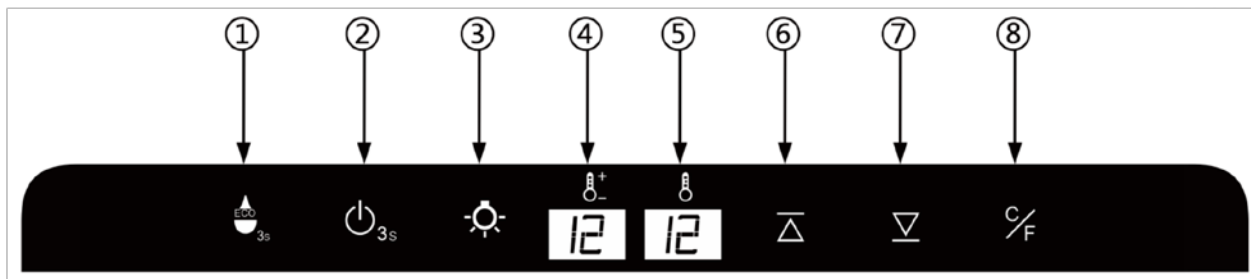

### ➤ ① Energy Saving Mode

Press the button for 3 seconds into the energy-saving mode, press ⑥⑦ out of energy-saving mode

### ➤ ② ON/OFF the power button:

In the standby mode: press 3 seconds, the power is turned on, the whole machine starts

In the power-on state: press the power button, window 4 shows the countdown 3 2 1, the power is turned off, the machine is turned off (show 3 2 1 process, the hand cannot leave the button)

### ➤ ③ Lamp button:

Press the button, lights on / off switch

(The default is that the light will be on when door opening and off when door closed. If you prefer to keep the light on when door closed, just long press the button to activate.)

### ➤ ④ Display Window:

Displays the setting temperature

### ➤ ⑤ Window:

Displays the actual temperature

### ➤ ⑥ Temperature setting up button :

Press one time, window ④ the set value will increase 1 degree Celsius in the original setting temperature, the setting range according to customer requirements.

 
➤ ⑦ Temperature setting down button :

Press one time, window ④ the set value will reduce 1 degree Celsius in the original setting temperature, the setting range according to customer requirements

➤ ⑧ C/F display conversion function keys:

Set the conversion degrees Celsius / Fahrenheit display, each press this button, the display window will be into degrees Celsius or Fahrenheit.

**AIN119GWE / AOFDZ127X DISPLAY BOARD OPERATING INSTRUCTION:**

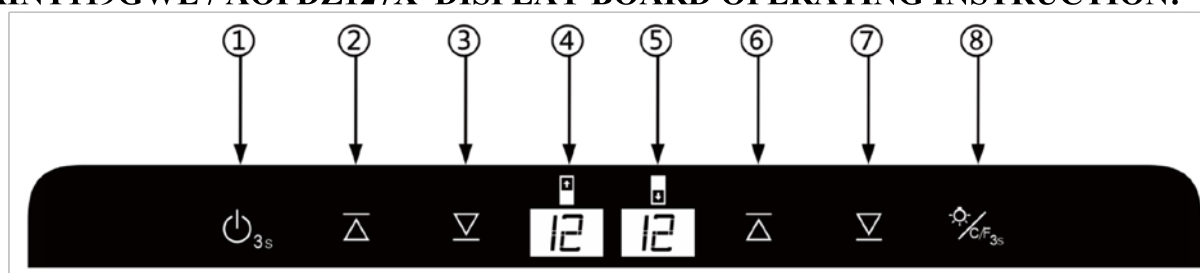

➤ ① “ON/OFF” the power button :

Press the button 3 seconds to power off (Window ④ digital countdown displays 3, 2, 1,). Press again (without delay), the power turns on.

➤ ② Upper zone temperature setting up button:

Press one time, window ④ the set value will increase 1 degree Celsius in the original setting temperature, the setting range according to customer requirements.

➤ ③ Upper zone temperature setting down button :

Press one time, window ④ the set value will reduce 1 degree Celsius in the original setting temperature, the setting range according to customer requirements.

➤ ④ Window :

Display upper zone temperature.

➤ ⑤ Window:

Display lower zone temperature

➤ ⑥ Lower zone temperature setting up button:

press one time, window ⑤ the set value will increase 1 degree Celsius in the original setting temperature, the setting range accordingly to customer requirements.

➤ ⑦ Lower zone temperature setting down button:

press one time, window ⑤ the set value will reduce 1 degree Celsius in the original setting temperature, the setting range accordingly to customer requirements.

➤ ⑧ Lamp button:

Press the button and the lamp turns on, the lamp will turn off once press again.  
(The default is that the light will be on when door opening and off when door closed.  
If you prefer to keep the light on when door closed, just long press the button to activate.)

➤ ⑧ C/F display conversion function keys:

Set the conversion degrees Celsius / Fahrenheit display, each press this button, the display window will be into degrees Celsius or Fahrenheit.

## WINE SERVING TEMPERATURE CHART

All wines mature at the same temperature, which is a constant temperature set between 12°C to 14°C. The below chart is an indicative temperature chart to indicate the best temperature for drinking purposes.

|                                                                     |      |
|---------------------------------------------------------------------|------|
| Champagne NV, Sparkling, Spumante                                   | 6°C  |
| Dry White Semillon, Sauvignon Blanc                                 | 8°C  |
| Champagne Vintage,                                                  | 10°C |
| Dry White Chardonnay                                                | 10°C |
| Dry White Gewürztraminer, Riesling, Pinot grigio                    | 10°C |
| Sweet White Sauternes, Barsac, Montbazillac, Ice Wine, Late Harvest | 10°C |
| Beaujolais                                                          | 13°C |
| Sweet White Vintage: Sauternes...                                   | 14°C |
| White Vintage Chardonnay                                            | 14°C |
| Red Pinot Noir,                                                     | 16°C |
| Red Grenache, Syrah                                                 | 16°C |
| Red Vintage Pinot Noir                                              | 18°C |
| Cabernet & Merlot: French, Australian, New Zealand,                 | 20°C |
| Chilean, Italian, Spanish, Californian, Argentinean...              |      |
| Vintage Bordeaux ...                                                |      |
| Room temperature not exceeding                                      | 20°C |

## IMPORTANT INFORMATION ABOUT TEMPERATURE

Your wine cellar has been designed to guarantee optimum conditions for storing and/or serving your wines.

Fine wines require long and gentle developments and need specific conditions in which to reach their full potential.

All wines mature at the same temperature, which is a constant temperature set between 12°C to 14°C. Only the temperature of “dégustation” (wine appreciation) varies according to the type of wines (see “Wine Serving Temperature Chart” above).

This being said and as it is for natural cellars used by wine producers for long period of storage, it is not the exact temperature that is important, but its consistency. In other words, as long as the temperature of your wine cellar is constant (between 12°C to 14°C) your wines will be stored in perfect conditions.

Not all wines will improve over the years. Some should be consumed at an early stage (2 to 3 years) while others have tremendous ageing capability (50 and over). All wines have a peak in maturity. Do check with your wine merchant to get the relevant information.

## **DEFROSTING/CONDENSATION/ HYGROMETRY/ VENTILATION**

Your beverage cooler is designed with “Auto-cycle” defrost system. During “Off-cycle” the refrigerated surfaces of the beverage cooler defrost automatically. Defrost water from the beverage cooler storage compartment drains automatically and part of it goes into a drainage container, which is located at the back of the beverage cooler next to the compressor. The heat is transferred from the compressor and evaporates any condensation that has collected in the pan. Part of the remaining water is collected within the beverage cooler for humidity purposes.

Notes: The water collected by condensation, is therefore recycled. Under extremely dry environmental conditions, you may have to add some water into the water container provided with your beverage cooler.

All units are equipped with a double glazed glass door that has a third internal acrylic layer to minimize condensation on the glass door.

The beverage cooler is not totally sealed; fresh air admission is permitted through the drainpipe. Air is circulated through the cooler by means of a fan/fans and the hollow shelves.

Notes: During the refrigerating cycle, heat is given off and disperses through the external surfaces of the beverage cooler. Avoid touching the surfaces during those cycles.

## **ADJUSTABLE WOODEN SHELVES**

Sliding wooden shelf installation and taking instruction:

Shelf taking: according to below instruction drawing to pull out the shelf to support bracket ① , press two sides of sliding roller buckles and pull out the shelf following the arrow mark ② .

Shelf installation: according to below instruction drawing to push in the shelf alignment with two sides of sliding roller following the arrow mark ③ .



## REVERSIBILITY OF THE DOOR

 
**REMARK:** If your wine / beverage cooler is equipped with lock at the bottom of the door , the door is not reversible so you have to order one right opening door to change the opening side.

**Warning:** To avoid accidents during the process of changing the door, we recommend that you get assistance. The glass door is heavy and may cause injury if dropped.

- Depending on to the model and the type of handle your beverage cabinet is equipped with, you may have to rotate the door through 180 degrees.
- Depending on the type of handle your beverage cabinet is equipped with, the door may not be reversible or may require that a left or right opening door be ordered to change the opening side.


1. To put the cabinet on open operation place, the door opened to the maximum angle
2. Use small knife(2) to take off the decorative nail (1) on opposite side (Drawing 1);
3. Use the inner six angle screwdriver (Tool 5) to disassemble the screws(4) of drop-proof device (3), then remove the drop-proof device .(Drawing 1)
4. Hold the door, use six angle screwdriver (Tool 5) to screw out the door shaft core(6) from the two ends of the top of the door. Take out the door and set aside. (Drawing 2)
5. Discharge the upper and lower door hinge(7)(8) by M5 inner six angle screwdriver (Tool 5) , then to assemble the door hinge on the opposite side. (Drawing 3 and 4 )
6. Rotate the door 180 degrees, then Install the door on the right side of the cabinet. (Drawing 5)
7. Finally, install the decorative nail and drop-proof device at the opposite side. (Drawing 6)

- |                     |                             |                      |
|---------------------|-----------------------------|----------------------|
| 1. Decorative nail  | 2. Knife                    | 3. Drop-proof device |
| 4. M5 six angle     | 5. M5 six angle screwdriver | 6. Door spindle core |
| 7. Upper door hinge | 8. Lower door hinge         |                      |

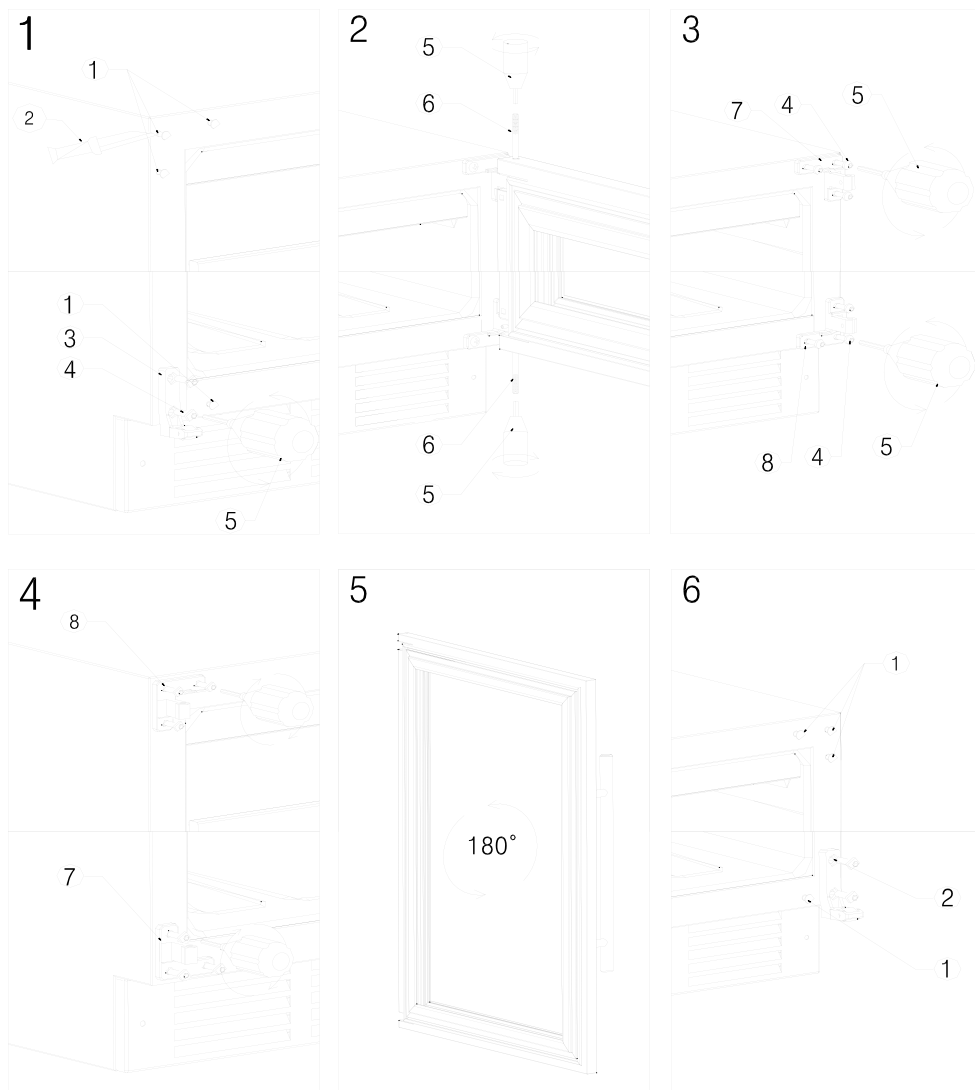


## Handle Installation Method

 1. Take out handle from cabinet, then take out 2pcs screws from accessory bag  
(Note: the screws of some models have been put on the door. If the door is made of all black glass, two white insulating columns shall be sleeved on the screw holes to prevent the metal screws from bursting the glass.)
2. Pull open door seal from the side of door, then insert screws into the 2 handle holes on side of door, then put the screws alignment the hole of handle, tighten the screws by Phillips screwdriver, then compress the door seal.

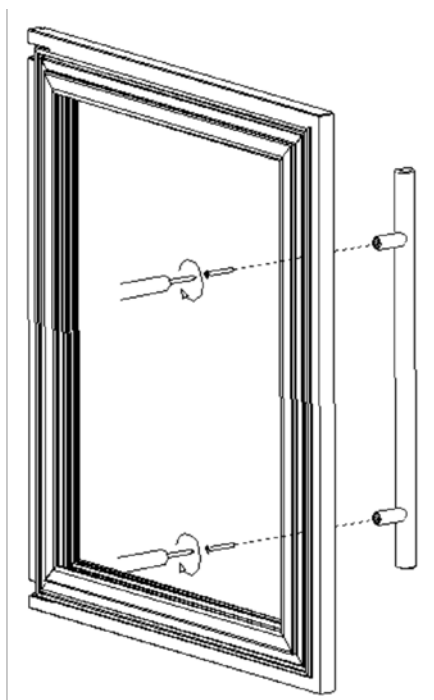

If the screws holes of the handle don't match perfectly with the holes of the door , please use the electric drill to drill the holes of the door a bit big ( in surface side) , in order to install the handle perfectly.

## Ventilation Plinth Installation Method

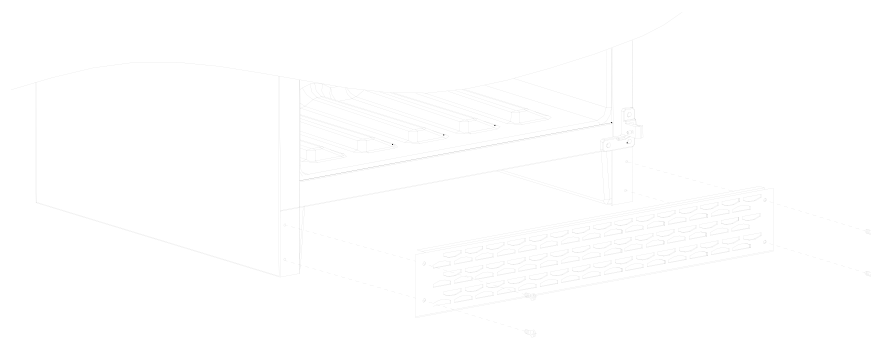 


1. Take out ventilation plinth from cabinet, then take out 4 pcs 4 \* 12 screws from accessory bag.
2. Open the door, align the ventilation plinth to the four screw holes in the bottom of the cabinet and tighten the screw with Phillips screwdriver.

## Drawer Model:
 
### Drawer Disassembly Method:

1. Pull the drawer (1) outward to the max. position, and remove the screws (3) on the drawer (1) and the sliding rail (2) on both sides with a Phillips screwdriver. (See Figure 1)

2. Lift the drawer (1) up, so that both sides of the drawer out of the front buckle (4), you can take out the drawer. (See Figure 2)
3. Install drawers in the opposite way. Pay attention to the buckle (4) in correct place during installation.

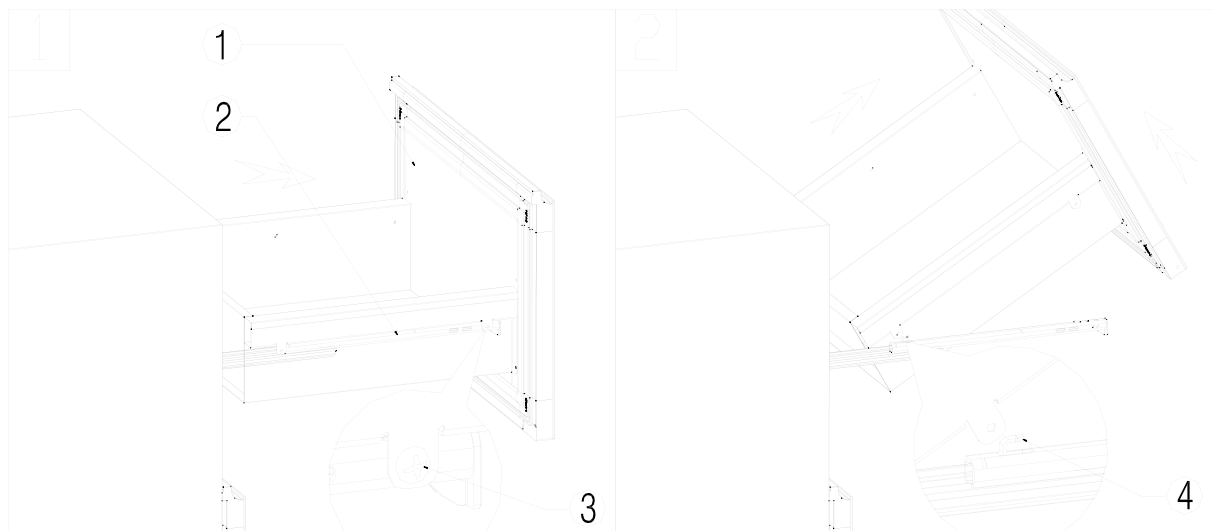

### Tilt-prevention Kit Mounting Instruction for AUBF620X

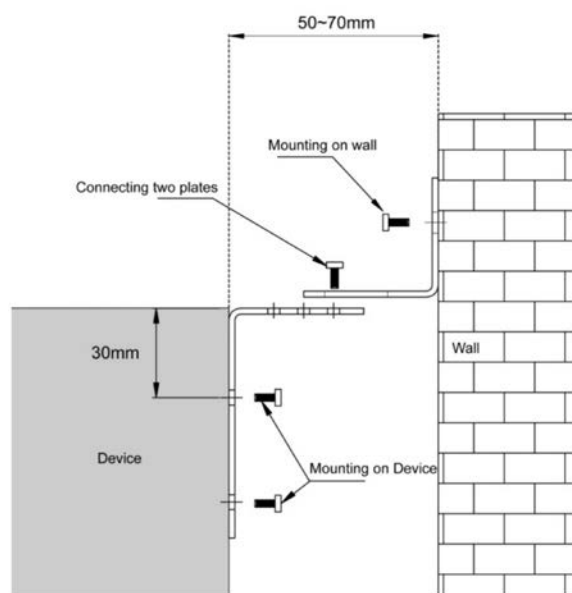 


Figure 1. Side view

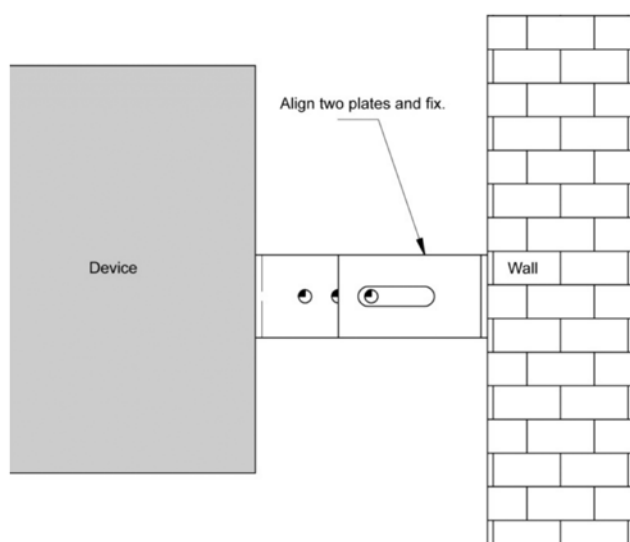 


Figure 2. Top view

## 1. Accessories

- ① Metal fixing plate 2pcs    ② M5\*16 flat head screws 3pcs  
 ③ M6\*60 anchor 1pcs    ④ ST4\*30 flat head self-tapping screws 2pcs



② M5\*16 flat head screws

③ M6\*60 anchor

④ ST4\*30 flat head self-

## 2. Instruction

a. Adjust device feet to level the machine;

b. Place the metal fixing plates according to Figure 1, and fix one to the device with M5\*16 flat head screws (screw holes are pre-drilled), the other one to the wall with M6\*60 anchor. (ST4\*30 flat head self-tapping screws can be used on wooden wall, for other type of walls please use M6\*60 anchor. Please check with someone professional for the application of screws if necessary.)

c. Move the machine in order to overlap the two metal fixing plates, keep the distance between backboard and wall at around 50-70mm. Fix the two metal plates with two M5\*16 screws.

3. The adjustable distance can be 50mm, 60mm, 70mm--Figure 3.

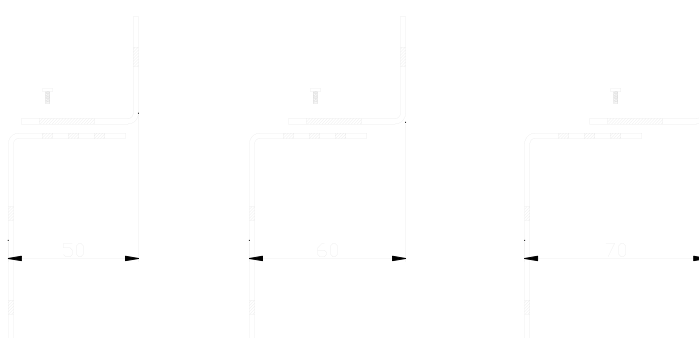 


Figure 3

## OPERATION ANOMALIES

Ensure that there is power to the electrical supply plug by connecting another electrical appliance to it. Check fuse, if any. Make sure that the door is closed properly.

If your beverage cooler appears to be malfunctioning, unplug it and contact your after sales service. Any intervention on the cold circuit should be performed by a refrigeration technician who should carry out an inspection of the circuit sealing system. Similarly, any intervention on the electrical circuit should be performed by a qualified electrician.

Notes: Any intervention performed by a non- authorized technician We will lead to the warranty being considered as null and void.

## POWER FAILURES

In the event of a power interruption, all previous temperature settings are automatically preservation and it will revert to a preset temperature setting. (See preset chart)

Most power failures are corrected within a short period of time. An hour or two's loss of power will not affect wine / beverage cooler's temperatures. To avoid sudden change of temperature while the power is off, you should avoid opening the door. For longer period of power failure, do take steps to protect your beverage.

**Irrespective of the cause, if you notice either abnormal temperature or humidity levels inside your beverage cooler, be reassured that only long and frequent exposure to these abnormal conditions can cause a detrimental effect on your beverages.**

## TROUBLESHOOTING GUIDE

Common problems may easily be solved, saving you the cost of a possible service call. Please read carefully the instruction manual and revert to troubleshooting guide chart.

| PROBLEM                             | POSSIBLE CAUSE                                                                                                                                                                                                 |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Beverage cooler does not operate.   | Not plugged in.<br>The appliance is turned off.<br>The circuit breaker tripped or the fuse is broken.                                                                                                          |
| Beverage cooler is not cold enough. | Check the temperature control setting.<br>External environment may require a higher setting.<br>The door is opened too often.<br>The door is not closed completely.<br>The door gasket does not seal properly. |
| Turns on and                        | The room temperature is hotter than normal.                                                                                                                                                                    |

|                                                   |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| off frequently.                                   | <p>A large amount of contents has been added to the Beverage cooler.</p> <p>The door is opened too often.</p> <p>The door is not closed completely.</p> <p>The temperature control is not set correctly.</p> <p>The door gasket does not seal properly.</p>                                                                                    |
| The light does not work.                          | <p>Not plugged in.</p> <p>The circuit breaker tripped or a blown fuse.</p> <p>The bulb is out of order.</p> <p>The light button is "OFF".</p>                                                                                                                                                                                                  |
| Vibrations.                                       | Check to assure that the Beverage cooler is level.                                                                                                                                                                                                                                                                                             |
| The Beverage cooler seems to make too much noise. | <p>The rattling noise may come from the flow of the refrigerant, which is normal.</p> <p>As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Beverage cooler.</p> <p>Contraction and expansion of the inside walls may cause popping and crackling noises.</p> <p>The Beverage cooler is not level.</p> |
| The door will not close properly.                 | <p>The Beverage cooler is not level.</p> <p>The door was reversed and not properly installed.</p> <p>The gasket is faulty. ( magnet or rubber is spoiled)</p> <p>The shelves are out of position.</p>                                                                                                                                          |

Before disposal of the appliance.

1. Disconnect the main plug from the main socket.
2. Cut off the main cable and discard it.

|                                                                                     | Correct disposal of this product                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.</p> |

**Worldwide Appliances Pty Limited****A.B.N. 45868077422****Distributed by Eurolinx pty Ltd****Office:**

48-50 Moore Street, Leichhardt N.S.W 2040 Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

**WARRANTY REGISTRATION**

Your ongoing satisfaction with your Artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the Artusi product purchased by you.

**PRIVACY**

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at [www.eurolinx.support](http://www.eurolinx.support) Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to Artusi or assist Artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the Artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your Artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact Artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

**WARRANTY****1. Warranty**

Worldwide Appliances warrants that each Artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

**24 MONTHS WARRANTY PRODUCTS:**

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances\* – Benchtop Models and Portable Gas Models

**2. WHAT IS NOT COVERED BY THE WARRANTY.**

The Warranty does not apply if an Artusi product is defective by a factor other than a defect arising in the manufacture of the Artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the Artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised Artusi service contractor\*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by Artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the Artusi product handbook provided to the purchaser upon purchase of the Artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the Artusi in respect of an Artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in Artusi products.

### 3. DOMESTIC USE

Each Artusi product is made for domestic use. This Warranty may not extend to Artusi products used for commercial purposes.

### 4. TIME FOR CLAIM UNDER THE WARRANTY

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

### 5. PROOF OF PURCHASE

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an Artusi product.

### 6. CLAIMING UNDER THE WARRANTY

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

### 7. STATUTORY RIGHTS

- (a) These terms and conditions do not affect your statutory rights.
- (b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:
  - (i) contravene the law of the relevant jurisdiction; or
  - (ii) cause any part of the Warranty to be void.
- (c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the Artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.
- (d) The liability of Worldwide Appliances to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:
  - (i) replacing or repairing the defective part of the Artusi product;
  - (ii) paying the cost of replacing or repairing the defective part of the Artusi product;
  - (iii) replacing the Artusi product; or
  - (iv) paying the cost of replacing the Artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## 8. DEFECTS

Any part of an Artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test Artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

**All warranty service calls must be booked via the customer care department.**

**The team can be contacted on 1 300 85 64 11 option 1 or**

**customercare@wwa.com.au**

**DON'T FORGET TO REGISTER YOUR  
WARRANTY ONLINE NOW AT**  
[wwa.com.au/warranty-registration/](http://wwa.com.au/warranty-registration/)





**FOLLOW US ON:**



/artusi\_kitchen\_laundry\_outdoor

**artusi.com.au**

---

Australia National Telephone Number 1300 694 583

Our showrooms opening hours in each state are available on our website

**NSW & ACT (Head Office)**

48-50 Moore Street  
Leichhardt

**Victoria**

2r/131 Church  
Street Hawthorn

**QLD**

Contact  
head office

**WA & NT**

Contact  
head office

---

**DISCLAIMER**

Worldwide Appliances PTY LTD, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of Artusi & Artusi and are not authorised to bind Artusi or Artusi by any express or implied undertaking or representation.