


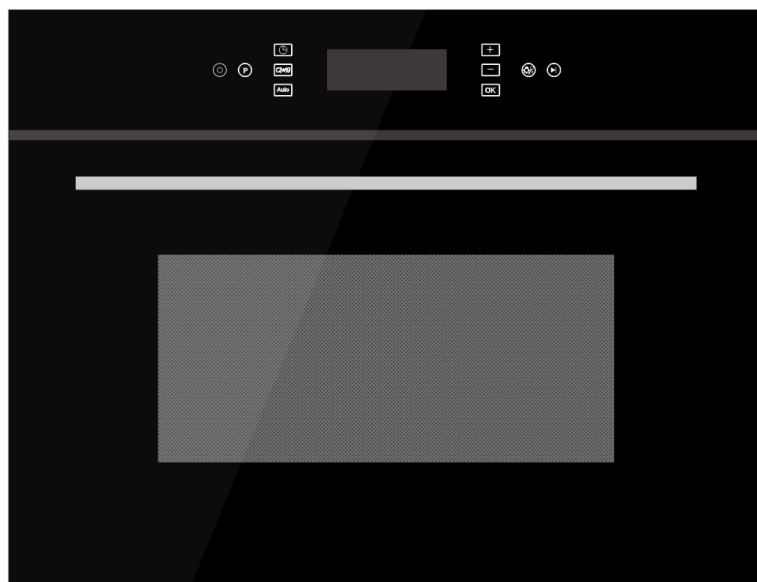

Built-in Microwave

AMO45NB



Thanks for using this products

Thank you for purchasing this product.

Please read this user manual carefully before installation and use, and follow all instructions to ensure optimal performance and longevity.

Keep this manual in a safe place for future reference. Be sure to complete the product warranty card at the time of purchase and retain it for warranty service.

Contents

1. Contents	1
2. Environmental Protection.....	2
3. Safety precautions.....	2
4. Dimension Specification.....	9
5. Parts Name.....	9
6. Technical Parameters.....	10
7. Electrical schematic diagram.....	10
8. Precautions for installation.....	11
9. How to install.....	11
10. Precautions for use.....	13
11. User Interface.....	16
12. How to use.....	17
13. Microwave Oven Functions.....	18
14. Auto Cooking.....	19
15. Defrost Time Table.....	20
16. Product Maintenance And Repair.....	20
17. Removing The Door.....	21
18. To Removing The Door.....	21
19. Cooking Guide.....	22
20. Selection Of Cooking Utensils.....	23
21. Daily Maintenance.....	25
22. FAQs And Handling.....	26

Symbols and meanings in the user manual:



Important information about personal safety and how to avoid damage to the product



Main content of description

Environmental Protection



This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

Safety Precautions



1. Tempered glass has special process characteristics. Self explosion is a characteristic of the tempered glass. The self explosion rate of the industry is 3 ‰ to 5 ‰, but our company strictly controls the self explosion rate within 3 ‰.

2. There is a high-voltage power supply inside the product. Do not open the outer cover for repair or modification.

Warning: Only qualified maintenance personnel can carry out maintenance operations on this product, otherwise it is dangerous. If you encounter any malfunctions during use, please contact our maintenance customer service center for assistance.

3. Never put metal objects or foreign objects, such as wires, fingers, etc., into the air intake and exhaust ports of the microwave oven.

Otherwise, it may lead to electric shock and injury. Please unplug the microwave oven from the power supply if a foreign object is inserted into the machine accidentally and contact our service center.

4. Please use a socket with a rated current of 10A or more, with reliable grounding. Do not use loose or poor contact with the power socket, otherwise it will easily lead to electric shock, short circuit, fire; if you share a socket with other electrical appliances, there may be abnormal heat resulting in fire.

5. Please pull out the plug from the socket by holding the end of the plug in your hand, do not pull out the plug by holding the power cord in your hand, otherwise it will be easy to cause electric shock, short circuit, fire and other dangers.

6. Please check whether the cooking utensils used are suitable for microwave oven before using the microwave function: please refer to "Selection of Microwave Oven Utensils", it is recommended to use high-temperature-resistant glass or ceramic containers to serve food.

7. Keep the power cord and plug away from the exhaust port, cover, high temperature or humid places to prevent dangerous aging of the power cord.

8. The air venting holes of the product must be kept free, and the outer cover is strictly prohibited to cover other objects and knock the product.

9. Do not soak the product in water or spray water on it, as there is a risk of short circuit or electric shock.

10. Do not use any AC power other than 187-242V, as it may cause fire and electric shock.

11. Please educate children not to use and play with the product alone, otherwise it may

lead to burns, electric shock and other accidents.

12. Do not disassemble or repair the unit by yourself except for professional repair technicians.

13. Please unplug the power supply or turn off the power supply of the product if it will not be used for a long time.

14. The power supply board must be replaced by a professional service center if it is damaged.

15. The power cord must be replaced at a professional service center if it is damaged.

GENERAL WARNINGS

IMPORTANT SAFETY INSTRUCTIONS:READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Read carefully all the instructions contained in this manual. It provides you with important information regarding the safe installation, use and maintenance of the appliance as well as useful advice for getting the best out of your microwave oven. Keep this booklet in a safe place for future reference. After removing the packing, check that the appliance is not damaged in any way.

Be careful not to leave the packing materials(plastic sheeting, expanded polystyrene etc.) where children can get at them, as they can be dangerous.

IMPORTANT: do not use the oven door handle to move the appliance, such as to remove it from the packaging.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING:MICROWAVE ENERGY!!DO NOT REMOVE THIS COVER!!

ATTENTION

The microwave oven is an appliance which, for its nature, becomes hot during use, especially the glass door.

It is therefore a good rule that children do not approach the microwave oven when it is functioning, particularly when the grill is in use.

Before you use the microwave oven for the first time, heat the empty oven at max. temperature for 1 hour, removing any unpleasant smells and smoke caused by working residues and thermal insulation. Make sure you do this in a well ventilated area.

Never roast or bake on the oven base.

This product is not designed for commercial use, it is a household appliance only. It is not intended to be used in:

- Staff kitchen areas in shops, offices and other working environments.
- Bed and breakfast type environments.
- By clients in hotels, motels and other residential type environments.

The electrical system of this appliance may be used safely only when it is correctly connected to an efficient earthing system in compliance with the safety standards currently in effect.

The manufacturer will not be held liable for any damages that might arise out of incorrect or improper use of the appliance. The following items are potentially dangerous, and therefore, appropriate measures must be taken to prevent children and the disabled from coming into contact with them:

- Controls and the appliance in general;
- Packaging(bags,polystyrene,nails, etc.);
- The appliance immediately after use of the oven or grill due to the heat generated;
- The appliance when no longer in use (potentially dangerous parts must be made safe).

WARNING

Accessible parts will become hot when in use. To avoid burns and scalds children should be kept away.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

--WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

--It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

--WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

--WARNING: Ensure that the cavity does not contain any items or utensils that are not suitable for the use with the microwave oven before you operate the appliance.

--WARNING: Do not use the cavity for storing combustible products, cooking utensils, or food and similar when the microwave oven is not in use.

--Only use utensils that are suitable for use in microwave ovens.

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Make sure that all the packing materials are removed from the inside of the door.
- WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact service immediately.
- This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
- Do not place the microwave oven where heat, moisture, or high humidity are generated, or near combustible materials.
- Do not operate the microwave oven when empty.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING: Liquid or other food must not be heated in sealed containers since they are liable to explode.
- Microwave heating of liquids can result in delayed eruptive boiling, therefore care has to be taken when handling the container.
- Do not fry food in the microwave oven. Hot oil can damage oven parts and utensils and even result in skin burns.
- Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
- Utensils should be checked to ensure that they are suitable for use in microwave oven.

WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Remove wire ties from paper or plastic bags before placing bag in oven.
- Do not leave paper products, cooking utensils or food in the cavity when not in use.

The appliance and its accessible parts become hot during use.
Care should be taken to avoid touching heating elements.

Children less than 8 years of age shall be kept away unless continuously supervised.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING: Accessible parts may become hot during use.

Young children should be kept away.

Appliance must be operated with any cabinet door open.

This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.

WARRANTY

Your new appliance is covered by warranty. The warranty card is enclosed - if it is missing, you must provide the following information to your retailer in order to receive a replacement: date of purchase, model and serial number (placed on the inside of the appliance storage drawer). Registration can also be completed online by visiting

Ensure you keep your warranty card safe, you may need to show it to Service together with proof of purchase.

If you fail to show your warranty card you will incur all repair charges.

Spare parts are only available from Service and spare parts authorized centers.

ATTENTION

--Before use, remove all plastic films protecting some parts of the appliance (fascia -panel, parts in stainless steel, etc);

--Do not use the appliance to heat a room.

--When the appliance is not in use, we recommend you turn it off, isolate it from the electrical supply.

CE DECLARATIONS OF CONFORMITY

This appliance has been designed, constructed and marketed in compliance with safety requirements in force. This appliance has been manufactured to the strictest standards and complies with all applicable legislation.

INSTALLATION

IMPORTANT:

ISOLATE YOUR MICROWAVE OVEN FROM THE ELECTRICAL SUPPLY BEFORE PERFORMING INSTALLATION OR MAINTENANCE.

Installation should be carried out according to the instructions by a professionally qualified person only.

The manufacturer declines all responsibility for any damage to persons, animals or materials due to incorrect installation.

ELECTRICAL CONNECTION

WARNING: THIS APPLIANCE MUST BE EARTHED

Check that the power rating of the mains supply is suitable for the maximum power of the appliance as indicated on the rating label.

The appliance is supplied with a mains lead it should be "Hard wired" as follows.

The "yellow/green" earth wire, which must be connected to a terminal, and has to be about 10mm longer than the other wire.

The neutral wire has to be connected to the terminal marked with a letter N.

The Live wire should only be connected to the terminal marked L.

Mains connection can also be made by fitting a double pole switch with a minimum gap between the contacts of 3mm, proportionate to the load and complying with the regulations in force.

The yellow/green earth wire should not be controlled by the switch.

When a double pole switch is used for mains supply connection it should be easily accessed, once the appliance is in position.

IMPORTANT:

The mains supply cable should be positioned so that it is never subjected to temperatures which are more than 50°C above ambient temperature.

The electrical safety of the appliance can only be guaranteed when it has been correctly connected to a properly earthed mains electrical supply, as laid down in the current regulations for electrical safety.

The manufacturer cannot be held responsible for any damage to persons or objects due to lack of an earth connection.

The ovens are designed to operate with a mono-phase alternating current of 220-240V 50Hz.

Before the installation of the appliance, check the specifications on the rating label.

CARE AND MAINTENANCE

IMPORTANT


Unplug your oven before cleaning, or performing maintenance!

To extend the life of your microwave oven, it must be cleaned frequently, keeping in mind that.


DO NOT USE STEAM EQUIPMENT TO CLEAN THE APPLIANCE

- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid or sprinkle water to clean the appliance!
- Do not clean the appliance while it is still hot! The inside and external surface of the oven should preferably be cleaned by damp cloth when it is cooled down.
- Wash all accessories in hot soapy water or in a dishwasher, wipe dry with a paper or cloth towel.
- If you use your oven for an extended period of time, condensation may form. Dry it using a soft cloth.
- There is a seal surrounding the oven opening which guarantees its perfect functioning. Check the condition of this seal on a regular basis. If necessary, clean it and avoid using abrasive products or objects to do so. Should it become damaged, please contact service. We recommend you avoid using the oven until it has been repaired.
- Never line the oven bottom with aluminium foil, as the consequent accumulation of heat could compromise the cooking and even damage the enamel.
- Clean the glass door using damp cloth and dry it with a soft cloth.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the **oven** door glass/ the glass of hinged lids of the hob (as appropriate), since they can scratch the surface, which can result in shattering of the glass.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Dimension Specification

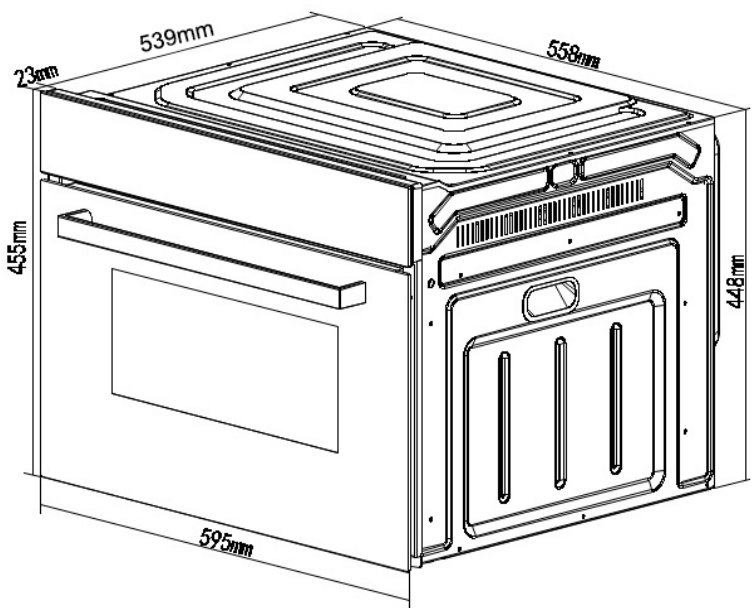

Parts Name

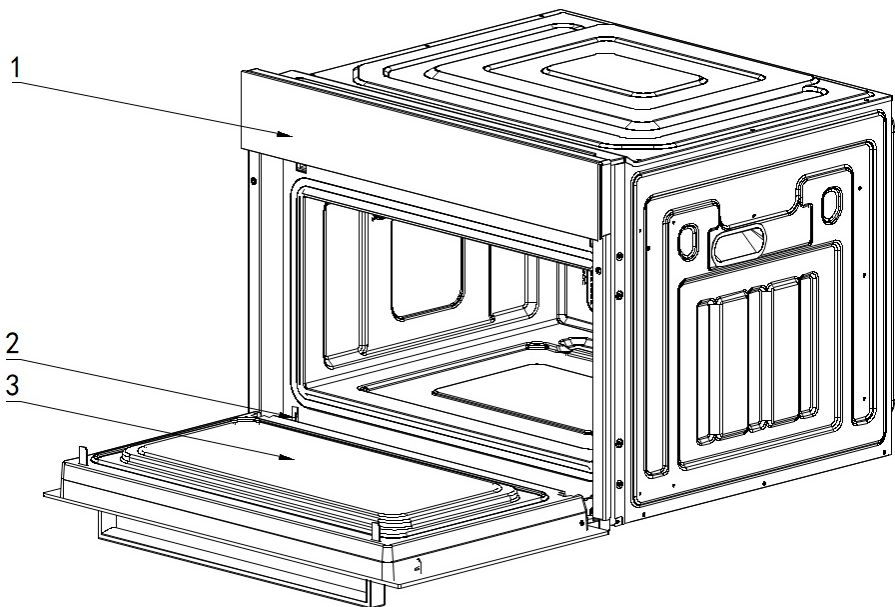


- 1、Control Panel
- 2、Door Hinge
- 3、Door

Technical Parameters



Product name	Built-in Microwave
Model	AMO45NB
Rated voltage	220-240V~50Hz
Rated frequency	50Hz
Microwave Input Power	1550W
Microwave Output Power	900W
Microwave Frequency	2450MHz
Volume	55L
How to install	Built-in
Product size	595 x 456 x 562 (W * H * D)
Embedding size	560 x 450 x 550 (W * H * D)
Packaging size	660 x 512 x 650(W * H * D)


Electrical schematic diagram

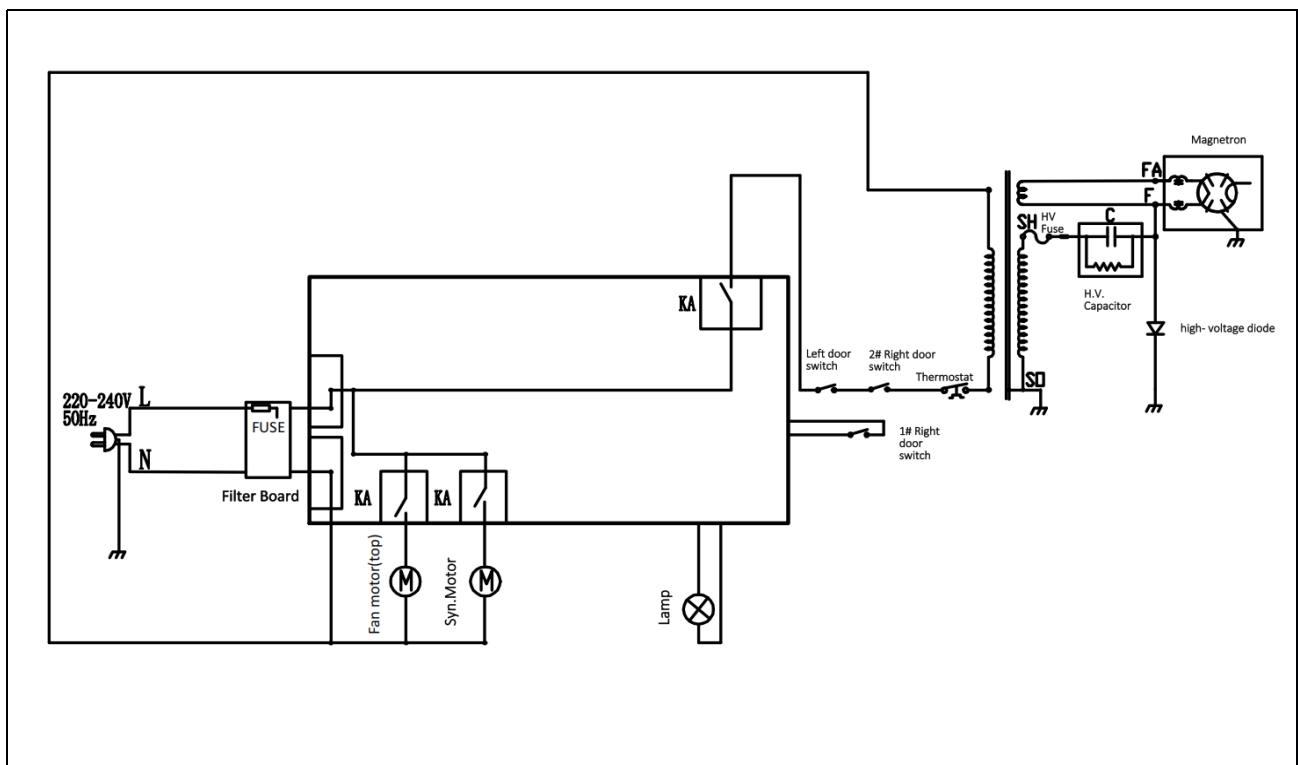

Precautions for installation



1. The product shall be installed smoothly in a place where it is easy to operate and maintain and where it is firm (not to be placed at an angle).
2. It is strictly prohibited to install the product and the power socket in a place where they may be exposed to moisture or water.
3. Make sure that the power supply is installed in an outlet with a rated current of 16A or higher and that the power outlet is reliably grounded.
4. The product must be lifted from the handle hole or the bottom and placed gently.
5. The surfaces of facilities and objects adjacent to the product must be insulated.
6. It is recommended that a switch be added to the front of the product's receptacle to facilitate disconnection of power when the product is not in use.
7. Do not touch the inside of the product directly when the product is in operation to avoid burns.
8. Embedded products shall be installed in the cabinet inside, which requires a good space for heat dissipation, otherwise it will affect the normal use of the installation of the cabinet. Heat dissipation as shown on the right.
9. Remove the manual and other items from the inside of the cabinet after installation.

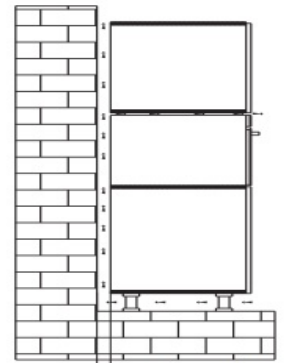


Please ensure a certain ventilation distance

How to install



1. Place the machine close to the mounting slot, and then plug in the power supply.
2. Lift up the bottom of the machine or the left and right side grips and place it lightly in the hole reserved for the machine in the cabinet, then push the machine so that it is leveled with the front cabinet body plate of the kitchen cabinet, so that the machine is completely embedded in the cabinet.
3. Open the front door of the machine and you can see two screw holes on the frame to fix the machine on the cabinet with mounting screws. The machine can be fixed on the lower part of the cabinet base or the upper part of the cabinet stand according to your needs.
4. The specific parameters of the machine embedded in the cabinet are shown in the installation schematic and the attached table.

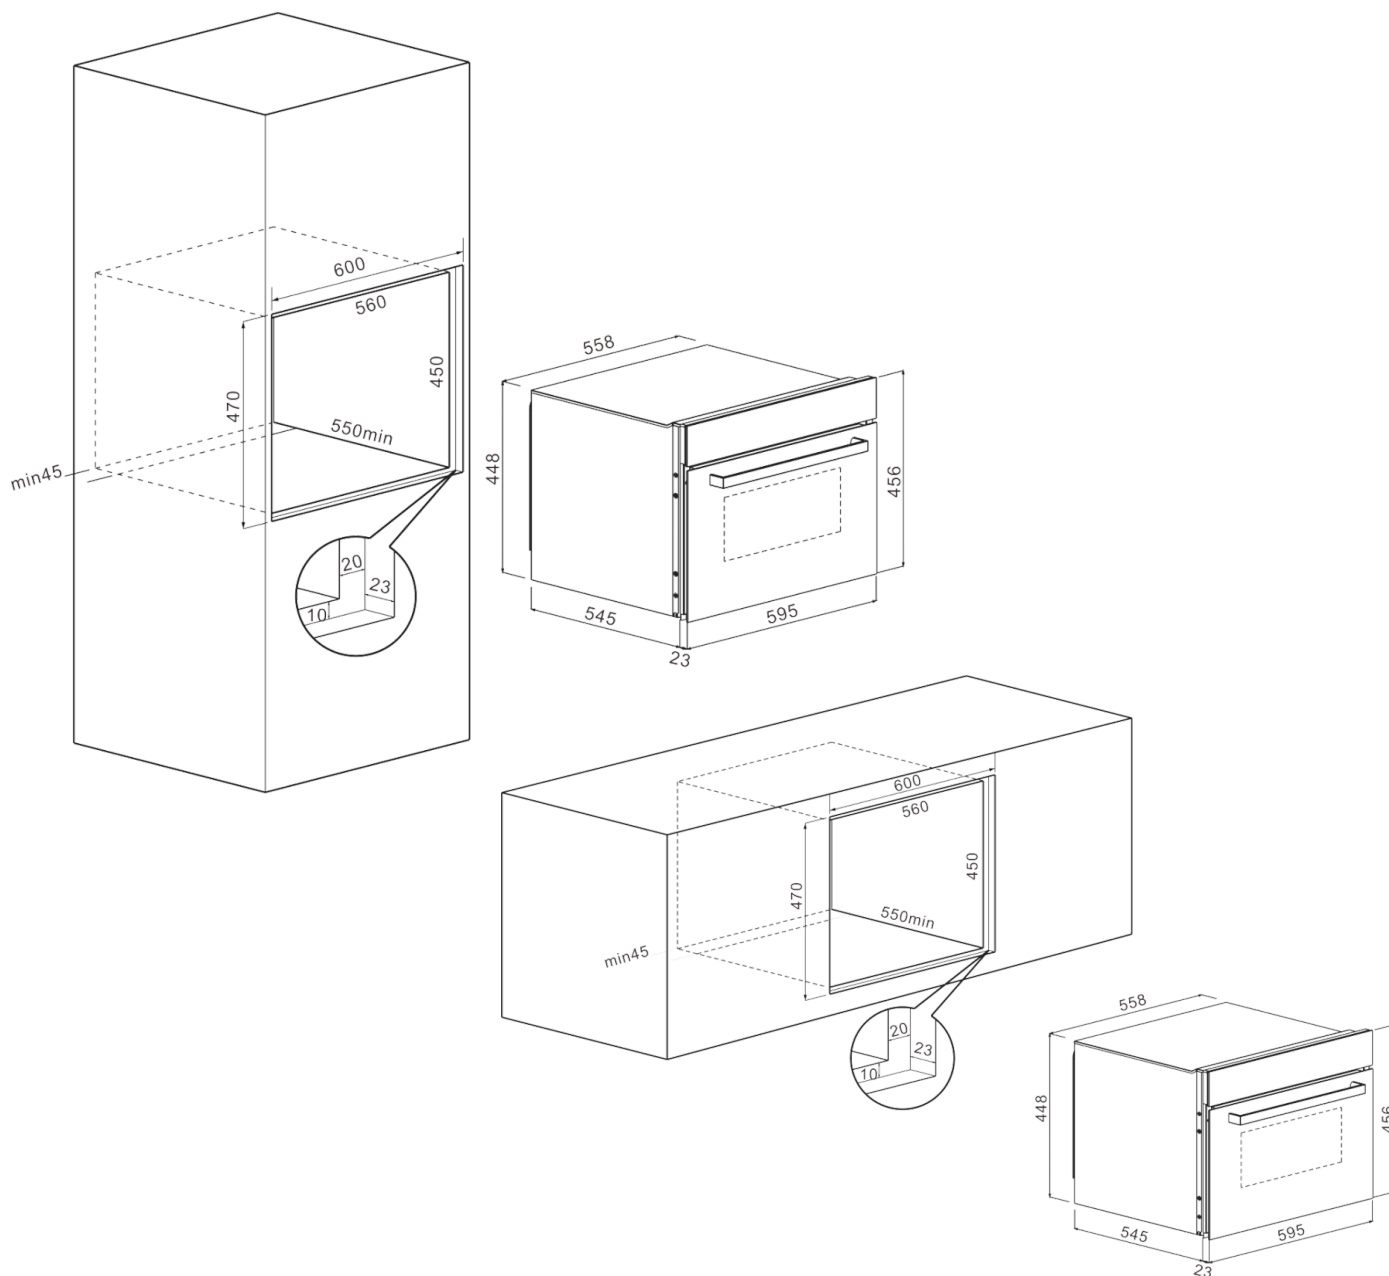

Product Installation Dimension Table

Model	Opening Sizes
AMO45NB	560*450*550 (deducted by 5mm for upper part and 0mm for lower part)(W*H*D)

During installation, ensure that there is adequate ventilation space around the unit, leaving a gap of at least 45 mm behind the rear support panel. Additionally, make sure that the ventilation openings on the front, bottom, and top of the unit are not blocked.

5. Installation and inspection of the machine (Please make sure that the internal packing of the machine should be removed during the inspection process).
 - 1) Energized inspection: The machine will make "beep" and "beep" sounds and the display should show the corresponding contents for a period of time after the power is turned on.
 - 2) Button inspection: Press each button after power on to check whether the buttons are responsive or not.
 - 3) Function inspection: Select any one cooking function to start the machine, check whether there is abnormal noise.

Precautions for use



1. Please use the separate socket with rated current above 16A which has reliable grounding measures.
2. Do not use the power supply other than 220-240V and 50Hz, or it will cause fire or electric shock.
3. This machine is only used for cooking food and shall not be used for any other purpose.
4. Do not allow children and incapacitated people to operate the machine without supervision on the spot.
5. When the machine breaks down or cannot work properly, it is necessary to cut off the power supply and do not try to repair it by yourself.
6. Upon the first use of the machine, it may produce a slight smell or smoke may occur during the first use which is the volatile gas produced by the heat exposure of the adhesive glue used in the heat insulation board around the machine. It doesn't cause any problem. For this case, just wait for a moment until the smoke has gone before putting the food into the machine. Don't bake the food directly on the chassis of the machine.
7. Except for professional maintenance technicians, do not disassemble, repair or transform it by yourself.
8. If the machine is not used for a long time, please unplug the power plug.
9. If the power cord is damaged, it must be replaced by the professional personnel of the manufacturer, its maintenance department or similar department to avoid danger.
10. When the machine is in use, it will generate heat. Please pay attention to avoid touching the heating unit in the machine.
11. Do not use steam to clean up the machine.
12. WARNING: The appliance shall not be operated when it is empty.
13. Open and close the door carefully: Slamming the door will lead to deformation of the door body, and microwave leakage is harmful to human body. Warning: If the door or door seal of the machine is damaged, the machine cannot be used again until it is repaired by qualified maintenance personnel.
14. If finding smoke, turn off the machine switch or remove the power plug, and keep the furnace door closed to suppress the spread of flame. The machine shall not work when it is connected with an external timer or in an independent remote control system.
15. Do not put things on the housing
Do not put foods or goods on the housing of the machine, which is very dangerous. Because goods may be heated and be out of deformation, burnt or catch a fire. Metal goods, such as knives, forks, spoons and covers can get hot.
16. Do not insert any foreign matter into the interlock switch of the furnace door, otherwise it will lead to microwave leakage which will cause harm to human body.
17. Please be careful when taking food. Do not touch the cavity, heating tube or door. Warning: If there are cracks in the ceramic bottom plate and door glass, please turn off the machine to avoid accidents.
18. Machine thermometer: Do not use a general thermometer in the Combination Microwave to measure the temperature, such as mercury thermometer.
19. Cleaning Combination Microwave:
 - Clean up the door seals, cavities and adjacent parts.
 - Regularly clean up the Combination Microwave and clear off all food residues removed in the machine.
 - Dirt or foreign substances in the Combination Microwave can cause deterioration of its surface,

which can affect the life of the machine and even may lead to dangerous conditions.

- Do not use a harsh cleaning agent or sharp metal spatula to clean the glass door of the Combination Microwave, otherwise it may lead to the scratches on the glass surface of the furnace door, which will cause the glass to shatter.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

IMPORTANT SAFETY INSTRUCTIONS PART ONE

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential environments;
 - bed and breakfast type environments.
- The minimum height of free space necessary above the top surface of the Combination Microwave.
- Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar can lead to risk of injury, ignition or fire.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they can explode, even after microwave heating has ended.
- Details for cleaning door seals, cavities and adjacent parts.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Only use the temperature probe recommended for this oven.
- The appliance shall not be cleaned with a steam cleaner.
- The **Combination Microwave** should be cleaned regularly and any food deposits removed.
- This appliance can be used by children aged from 8 years and above and persons with reduced

physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT SAFETY INSTRUCTIONS PART TWO

1. Please use microwave cooking utensils.

Only suitable utensils can be used when the microwave function of the machine is used.

(A) It is recommended to use the wide-mouth ceramic or glassware for microwave ovens;

(B) It is prohibited to use metal utensils under microwave conditions;

(C) The volume of liquid food (such as milk) in the container should not be more than two-thirds of the container's volume.

2. Heating the food in the sealed container

It is forbidden to heat the food in the sealed container, because it may cause the explosion. For examples, sealed glass bottles, pop cans, cans, capped milk bottles, milk in containers, milk in bags, and instant noodles in containers, the packaging of them need to be split to place the foods in microwave containers for heating.

3. Avoid excessive heating

The biggest characteristic of the microwave oven is fast to heat the food; after enabling the microwave function, be sure to often pay attention to the cooking situation in the oven to avoid excessive heating which may generate smoke or catch fire, and the overheated containers can be melt and cracked. When heating food wrapped in plastic or paper, keep an eye on the machine because of the possibility of fire. When heating a small amount of food for a long time, the heat is not absorbed by enough food and furnace cavity will be in abnormal high temperature, so it is easy to get a burn. Therefore, do not touch the furnace cavity after the heating is over.

4. Do not cook shelled eggs with the machine

The microwave function cannot be used to heat fresh or hard-boiled eggs with shells, for they may explode upon the microwave heating or even after heated. When the eggs are heated with the microwave function, the eggs are heated to generate the rapid expansion inside, because the egg shell and yolk membrane are in a sealed state, therefore it will lead to explosion; besides, a sudden burst may occur after the eggs are taken out of the machine.

5. Heating soup, drinks and other fluid foods

Microwave heating the beverage can delay the boiling or the splash, so be careful when taking it out of the oven.

Bottles and baby food cans should be stirred or shaken. Check the temperature of food in bottles before feeding to avoid burns.

6. Fry food

Do not fry food with microwave function in case of fire.

7. Be careful when tearing off the fresh-keeping film

Be careful that the steam will overflow when tearing off the fresh-keeping film due to high temperature.

8. Food with the skin or shell

When cooking the food with the skin or shell, such as apples, chestnuts, potatoes, red sausage, chicken wings, etc., please use with a knife and fork for perforation to prevent food from exploding.

9. Heating high-temperature cooking ware

The insulating gloves should be used when taking out food, utensils or other accessories from the

microwave oven after heating to avoid high temperature scald.

10. Please refer to the relevant cooking instructions when cooking


Please follow the instructions in the operation manual for the information on the containers and cooling skills when using the automatic menu and adjust the cooking time according to one's taste.

11. Aluminum foil and metal utensils cannot be used for microwave heating, which will lead to ignition, fracture of the roof of furnace cavity and the glass door.


User Interface



CONTROL PANEL

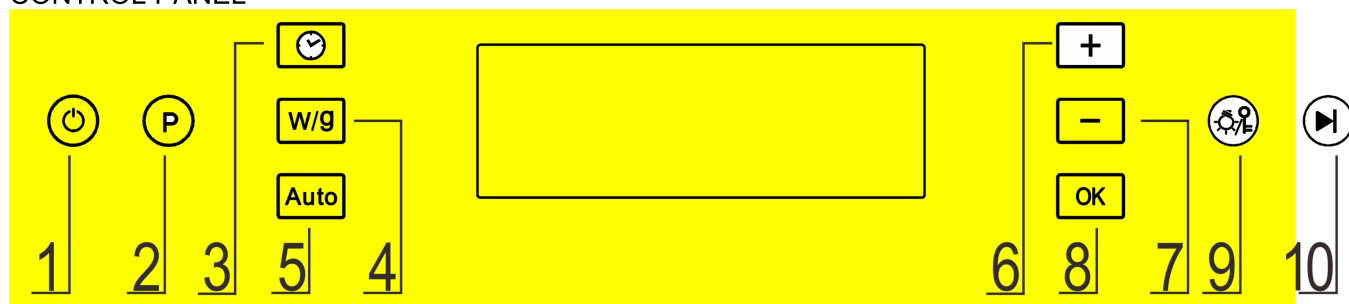

- | | |
|-----------------|-----------------------|
| 1. Power | 5. Auto cooking |
| 2. Programme | 6. Increase key |
| 3. Timer | 7. Decrease key |
| 4. Power(watts) | 8. Confirm |
| Weight(grams) | 9. Light / Child lock |
| | 10. Start / Pause |

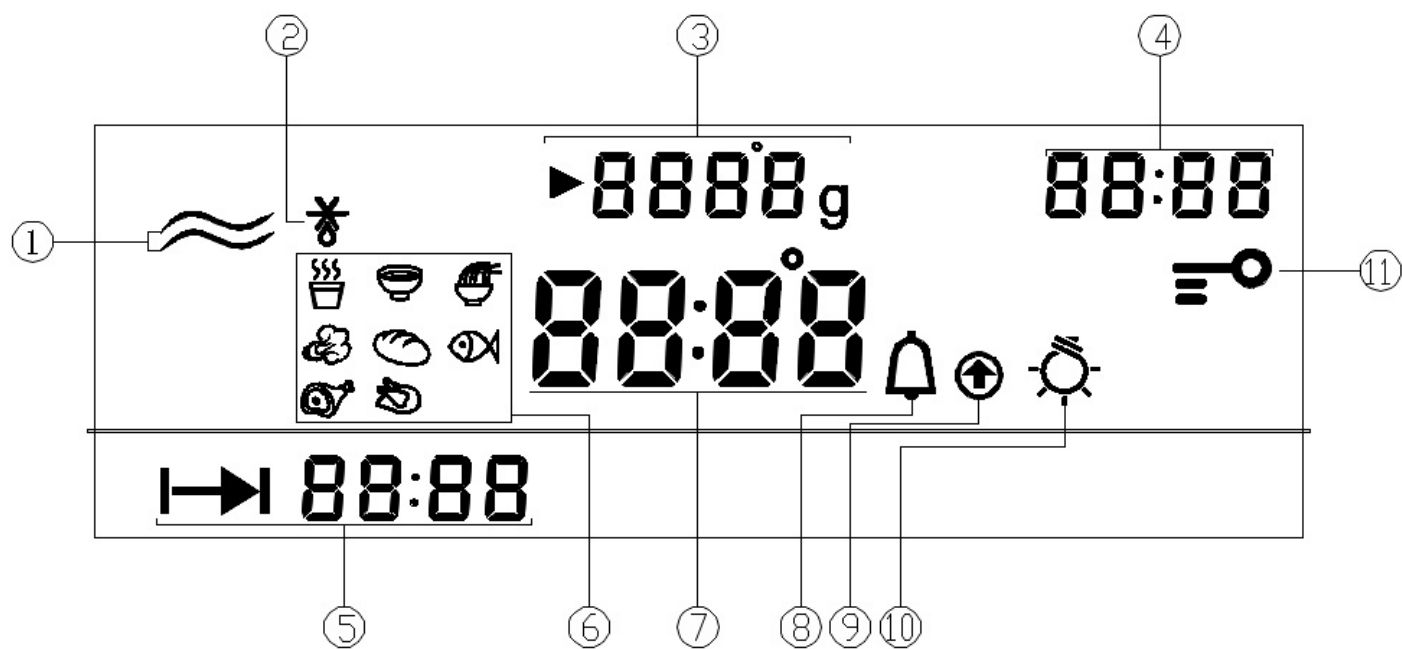

- | | | |
|--------------------------|------------------|-----------------|
| 1. Microwave | 5. Duration time | 9. Heating icon |
| 2. Defrost | 6. Auto cooking | 10. Light |
| 3. Power /Weight (grams) | 7. Time Display | 11. Child lock |
| 4. Time | 8. Alarm | |

How to use



OPERATION


Press the  button to turn the oven on. When turned on, the display will light up and the time of day will be shown.

Programme / Function

To select a function, press the PROG button to toggle through the functions and press OK once you have reached the required function. Press the W/g button to enter the power (W) or weight (g) mode depending on what function has been selected.

To adjust the power or weight, use the +/- keys followed by OK to confirm.

Once confirmed, press the  button to start cooking. The main timer will show the actual temperature, with the set temperature shown above this.

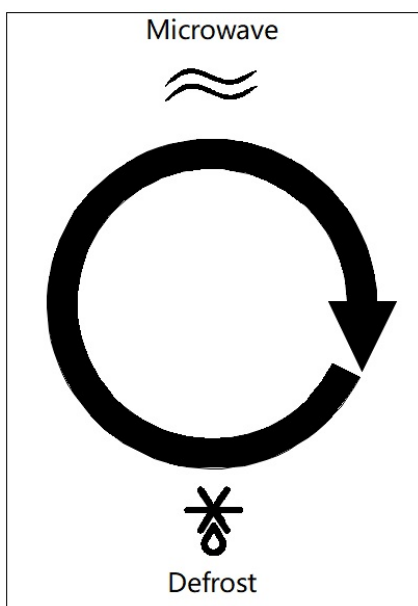

Light function

Press the  button once to turn the internal microwave oven lights on & off. The lights will automatically turn off after 3 minutes of no operation.

When the light is activated the  symbol will be shown on the display.

Child lock

Hold the  button for 2-3 seconds to activate the child lock. To deactivate, press and hold  the button again for 2-3 seconds.

When the Child lock is activated, the  symbol will be shown on the display.

Alarm setting

To set the Alarm/minute minder, press the  button until the  symbol starts to flash. Use +/- to adjust the time, and then press OK to confirm. If you want to cancel the alarm, set the alarm time back to '0.00' and press OK to confirm.

When the time is up, the alarm will sound for 90 seconds, and the  symbol will begin to flash. To stop the alarm, press any button.

Setting the time

To set the time, turn the oven on, and then press and hold the  button for 3 seconds until the time begins to flash. Adjust the time using the +/- and then press OK to confirm.

When the oven is first turned on or restarts, the time must be set before using the oven.

Duration cooking(00:30-60min)

Once a function have been selected, press  the button and the Duration time will start to flash. Press +/- to adjust the time, and then OK to confirm. Once the time is up, the alarm will sound and the oven will switch off.

 
Press any of the buttons to turn off the alarm +/-, OK, and .

To cancel Duration cooking set the cooking time to '0:00' and confirm.

MICROWAVE OVEN FUNCTIONS



Press the PROG button to select the following functions.

Function icons	Description
	P1 gear: MICROWAVE Default power P100(power range P10-P100). To adjust the power, Press +/- until the correct power is reached followed by OK. Default time is 30secs. To Adjust the time, press the  button followed by the +/- and OK to confirm. Finally press to start the program.
	P2 gear: DEFROST Default weight 1000g(weight range 100-2000g). To adjust the weight press the W/g button followed by the +/- and OK to confirm. Finally press  to start the program. The default time will be adjusted according to the set weight(See the 'Defrost time table' for more info).



AUTO COOKING



Example

SYMBOL	DESCRIPTION
	Milk(Auto program) Press the Auto programme button until Milk symbol is displayed. Press the W/g to enter the Weight selection. Use the +/- to adjust the weight and press OK to confirm. The default time will be adjusted according to the weight selected. Finally press  to start the programme.

Auto Cooking Functions

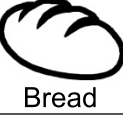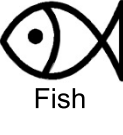SYMBOL	DEFAULT WEIGHT	WEIGHT ALTERNATIVES	FUNCTION	DURATION
 Milk	250g	250	Microwave	2
		500		4
 Soup	500g	500	Microwave	19
		800		22
 Noodles	300g	300	Microwave	5
		600		8
 Vegetables	200g	100	Microwave	2
		200		4
		300		5
		400		6
		500		7
		600		8
 Bread	200g	100	Microwave	1
		200		2
		300		3
 Fish	500g	100	Microwave	3
		200		5
		300		6
		400		7
		500		8
		600		9
		700		10
		800		11
		900		12
		1000		13
 Meat	500g	200	Microwave	7
		300		8
		400		10
		500		12
		600		14
		800		16
		1000		19

 Chicken	1000g	200	Microwave + Grill	15
		400		20
		600		25
		800		30
		1000		32
		1200		35
		1400		40
		1600		46
		1800		52
		2000		56

DEFROST TIME TABLE



The maximum weight for defrost is 2000g. The default defrost time will be adjusted according to different weight selected.

WEIGHT (GRAMS)	TIME (MINUTES)	WEIGHT (GRAMS)	TIME (MINUTES)
100	3	1100	22
200	5	1200	24
300	6	1300	26
400	8	1400	28
500	10	1500	30
600	12	1600	32
700	14	1700	34
800	16	1800	36
900	18	1900	38
1000	20	2000	40

Product Maintenance and Repair



1. Your equipment can be used for many years without any problems as long as it is properly installed and maintained.
2. Please make sure to unplug the unit from the power supply in time after use, and do not place it near fire or immerse it in water; do not place the power cord and plug directly on top of the cover to prevent damage to the power cord from the residual heat of the cover.
3. Wait for the microwave oven to cool down for cleaning.
4. Dirt left inside the oven cavity must be cleaned frequently to avoid affecting the heating effect.
5. Wipe the microwave oven shell with a cloth dipped in soft detergent (e.g. dishwashing liquid) and wipe it with a slightly damp cloth, then dry it with a dry cloth to keep the oven cavity dry. Do not use rough scrubbers or sharp metal scrapers to clean the glass of the microwave oven door, if the glass surface of the microwave oven door is scratched, it will lead to glass crushing.
6. Do not wipe the oven body with bad cleaning agents and chemical solvents with corrosive and volatile properties to avoid damage to the oven body.
7. Please keep the wave guide port on the side of the microwave oven clean. Please do not remove the wave guide cover (mica sheet) to avoid ignition.
8. Keep the joint between the door and the stove body clean frequently; please do not clean the door safety lock system.
9. The appliance generates heat during use, so be careful to avoid touching the heat generating units inside the appliance.

Removing The Door



To make it easier to clean the inside of your oven, the oven door can be removed by proceeding as follows (Fig. 1-2):

- > Open the door completely and lift the 2 levers “B” (fig.1);
- > Now, shutting the door slightly, you can lift it out by pulling out the hooks “A” as shown in figure 2.

To Reassemble The Door



- > With the door in a vertical position, insert the two hooks “A” **into** the slots;
- > Ensure that seat “D” is hooked perfectly onto the edge of the slot (move the oven door backwards and forward slightly).
- > Keep the oven door open fully, unhook the 2 levers “B” downwards and then shut the door again.

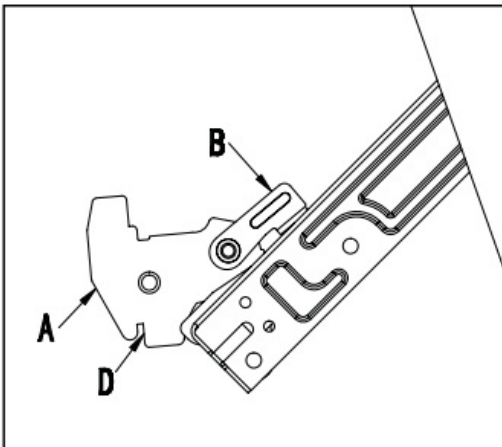


Fig 1

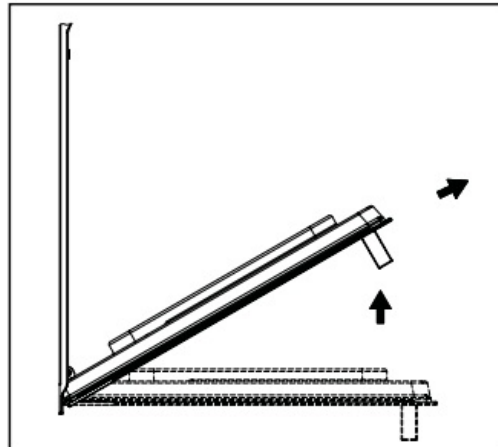


Fig 2


Cooking Guide



	Type	Quantity	Power	Duration	Remarks
Reheating	Cooked dishes from the refrigerator (fish, meat, rice, etc.)	400g	800W	5-7 minutes	
	Frozen dishes (fish, meat, rice, etc.)	400g	900W	4-6 minutes	
	Liquids (water, milk, soup, etc.)	250 ml	1000 W	5.5-10.5 minutes	
	Chocolate solution	200 g	700 W	1-2 minutes	
Cooking	Roasts (pork, veal, beef, etc.)	1 kg	700 W	20-25 minutes	Stir
	Steak, lamb chops	500 g	700 W	5-10 minutes	Stir
	Whole chicken	1 . 2 kg	700 W	35-45 minutes	Stir
	Sausages	500 g	700 W	5-10 minutes	Stir
	Whole fish (salmon, mackerel, bream, etc.)	1 kg	800 W	10-15 minutes	Stir
	Fish fillets	500 g	800 W	5-10 minutes	Stir
	Beans, broccoli, cauliflower, carrots, mushrooms, etc.	500 g	900 W	5-10 minutes	Place in a glass dish with water in the bottom and stir
	Potato skins	500 g	900 W	10-15 minutes	Pierce skin; stir

 Selection of Cooking Utensils



Types of containers	Baking/roasting Constant temperature fermentation	Steam	Microwave
Ceramic/porcelain 	Note: Do not use containers with colorful drawings on the inside as the colors may peel off. 		
Lacquerware 			
Metal containers such as aluminum 	Note: Do not use metal containers with resin handles. 	Note: For microwave oven 	Note: For microwave oven 
Wooden, bamboo, paper containers 	Note: Paper containers with heat-resistant processing can be used when the cooking temperature is below 230 °C. 	Note: Wooden, bamboo containers and paper products with heat-resistant processing can be used. 	
Wrap for microwave oven 	Note: Wrap will melt when exposed to high temperatures. 	Note: Wrap will melt when exposed to high steam temperatures. 	
Aluminum Foil 			
Heat-resistant glass containers 			
Non-heat-resistant glass containers 	Note: Can be used for constant temperature fermentation. 		

Heat-resistant plastic containers 	 Note: Can be used for constant temperature fermentation.		
Non-heat-resistant plastic containers 	 Note: Can be used for constant temperature fermentation.		

Note: ✓ means applicable Note: × means not applicable

Instructions for using the accessories in the machine.

Types of containers	Baking/roasting Constant temperature fermentation	Steam	Microwave
			Remove when using the microwave function 
		It is recommended that you only use 2 layers for steaming 	Remove when using the microwave function 

Daily maintenance



Attention: This product should be regularly maintained to maximize its performance and extend its service life. Before maintenance, it must be unplugged and turned on to confirm that the power has been cut off.

Do not pull the cable to unplug the Combination Microwaves.

It should first remove the attachment and then clean the inner tank with a cloth.

It is strictly prohibited to spray the Combination Microwaves directly with water, and do not use strong acid and alkaline detergents.

After each use, it should maintain the inner tank. After the inner tank cools down, use a dry cloth to wipe the entire inner tank, or open the Combination Microwaves door to completely dry the inner tank.

If the Combination Microwaves malfunctions or cannot function properly, please cut off the power and do not attempt to repair it by yourself.

FAQs and Handling



Please stop using it, unplug the power cord, and check and confirm the following if any abnormality occurs during your use. Please contact our after-sales service center if necessary.

Status	Reason	Handling method
No operation of the control panel	Entered the child lock state	Release the child lock status
	Bad switch board	Notify the manufacturer for repair
Food does not have a temperature	No microwave output	Notify the manufacturer for repair

Warranty Card

artusi.com.au

Worldwide Appliances Pty Limited

A.B.N. 45868077422

48-50 Moore Street, Leichhardt N.S.W 2040
Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at www.artusi.com.au. Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is

to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY

1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods. Freestanding Cookers - Gas and Electric Models (900mm Width).

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in. All Wine coolers. All Dryers. Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in artusi products.

3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

Continued over...

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you

for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

All warranty service calls must be booked via the online service request form:

www.com.au/#asr

01082016

DON'T FORGET TO REGISTER YOUR WARRANTY ONLINE NOW AT:
www.com.au/warranty-registration

[illegible]

NOTES

[illegible]



FOLLOW US ON:



/artusi_kitchen_laundry_outdoor



/au.linkedin.com/company/worldwideappliances

artusi.com.au

Australia National Telephone Number 1300 694 583

Our showrooms opening hours in each state are available on our website

NSW & ACT (Head Office)

48-50 Moore Street
Leichhardt

Victoria

2r/131 Church Street
Hawthorn

QLD

Contact
head office

WA & NT

Contact
head office

DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.